



PRODUCT NAME: BOUNCE ITEM NUMBER:E23100-BKPC


Please consult your electrician for hanging fixture and wiring.

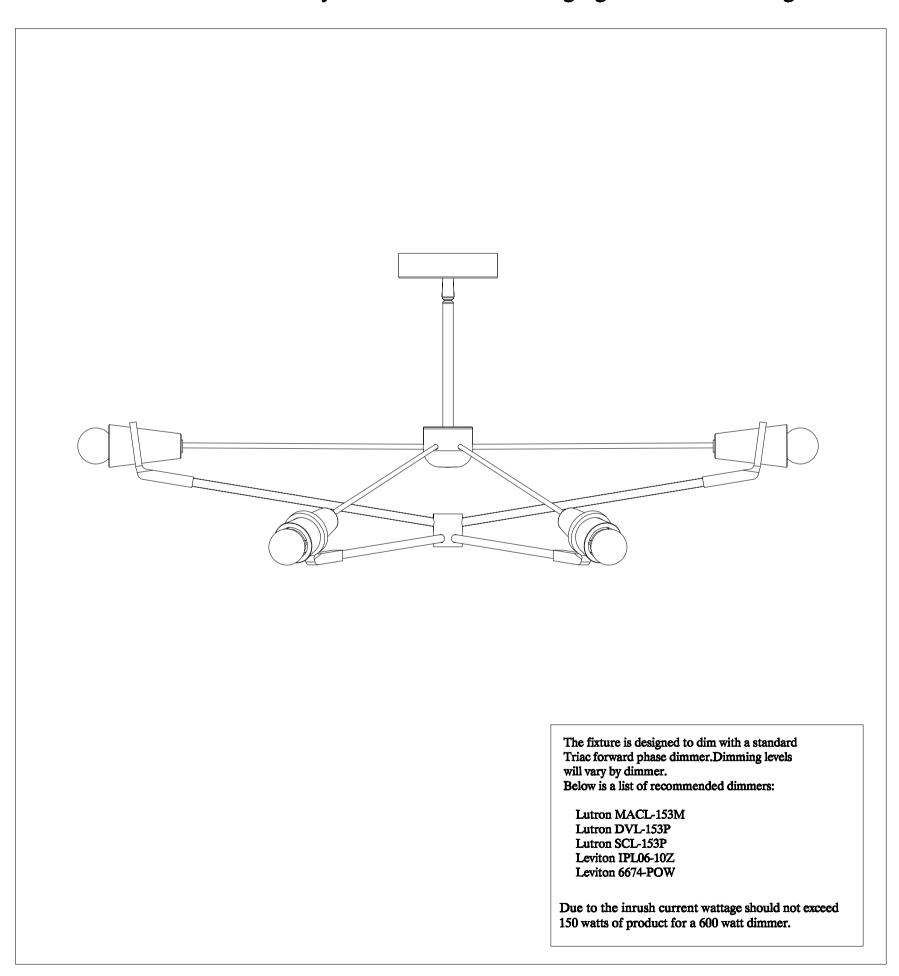


IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation

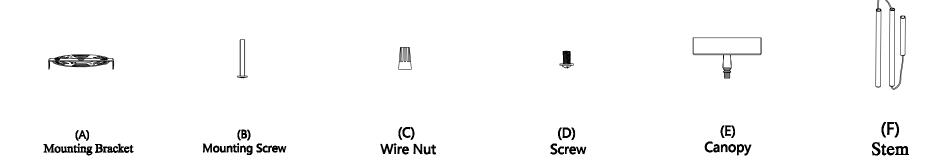


Locate all hardware & components before discarding packaging

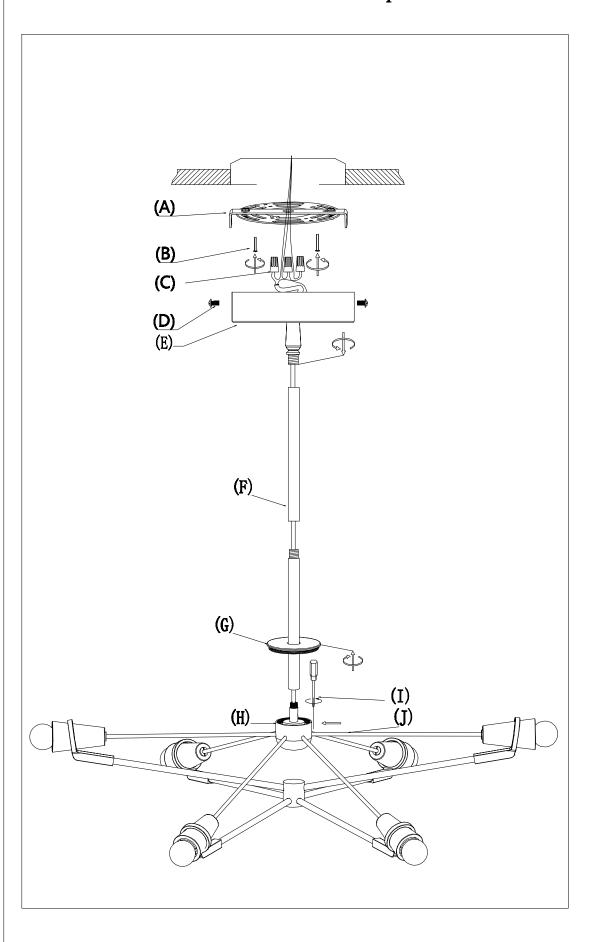

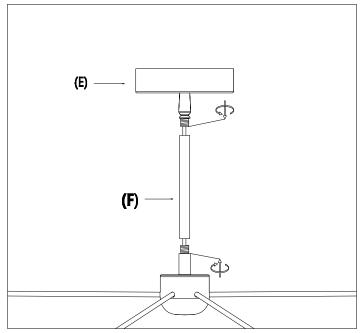

<1>Run wire through stems (F) and combine stem lengths to meet desired mounting height.

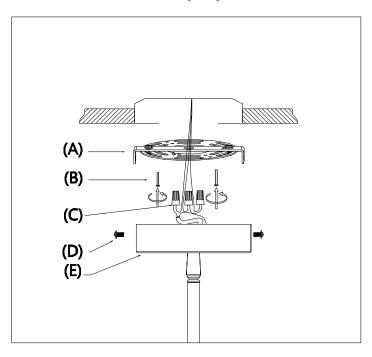


<2>Remove mounting bracket (A) from fixture and install to electrical box using screws (B).

- <3>Wire fixture to wires in outlet box (C). Bare wire is for Ground.
- <4>Install fixture to bracket and tighten screws (D) at the ends of the canopy (E) to secure.


Cleaning & Care:

Clean with soft cloth and a mild detergent.

Do not use abrasive cleaner.

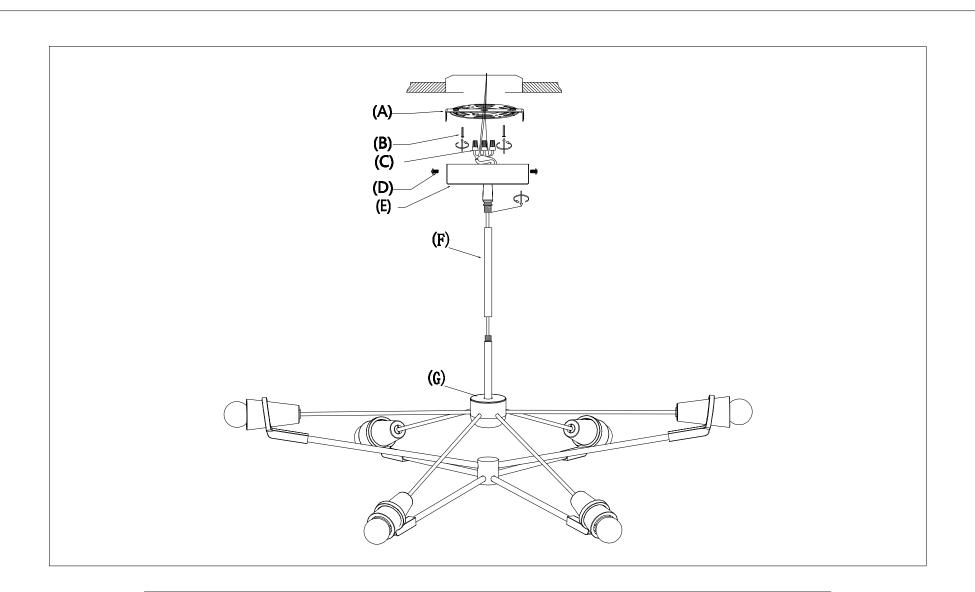

NOTE: Wires can be adjusted within collector(G).
Simply unthread the cap on collector and fasten wire
With Allen screws already installed.

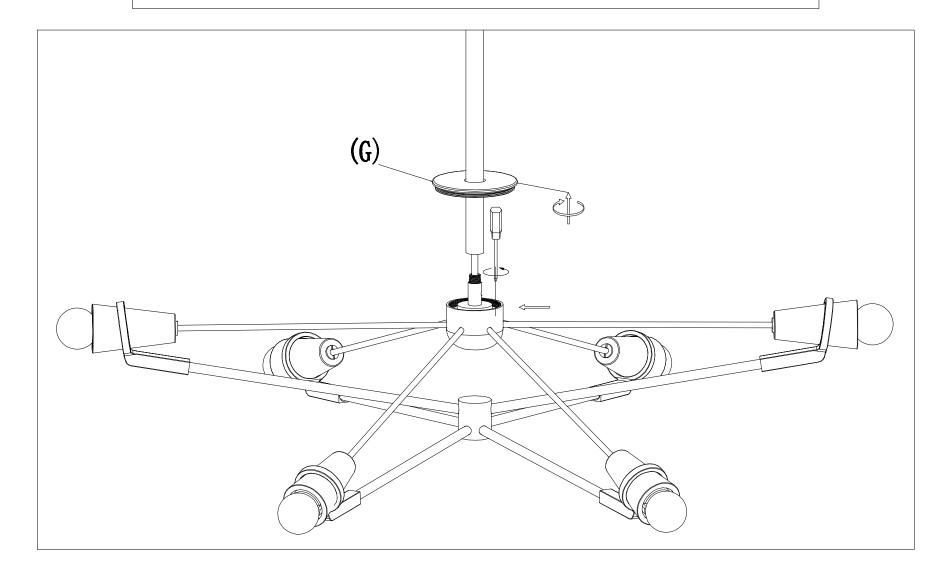

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.