


Contemporary Lighting

PRODUCT NAME: Light Saber

ITEM NUMBER: E41435-75GM

Please consult your electrician for hanging fixture and wiring.

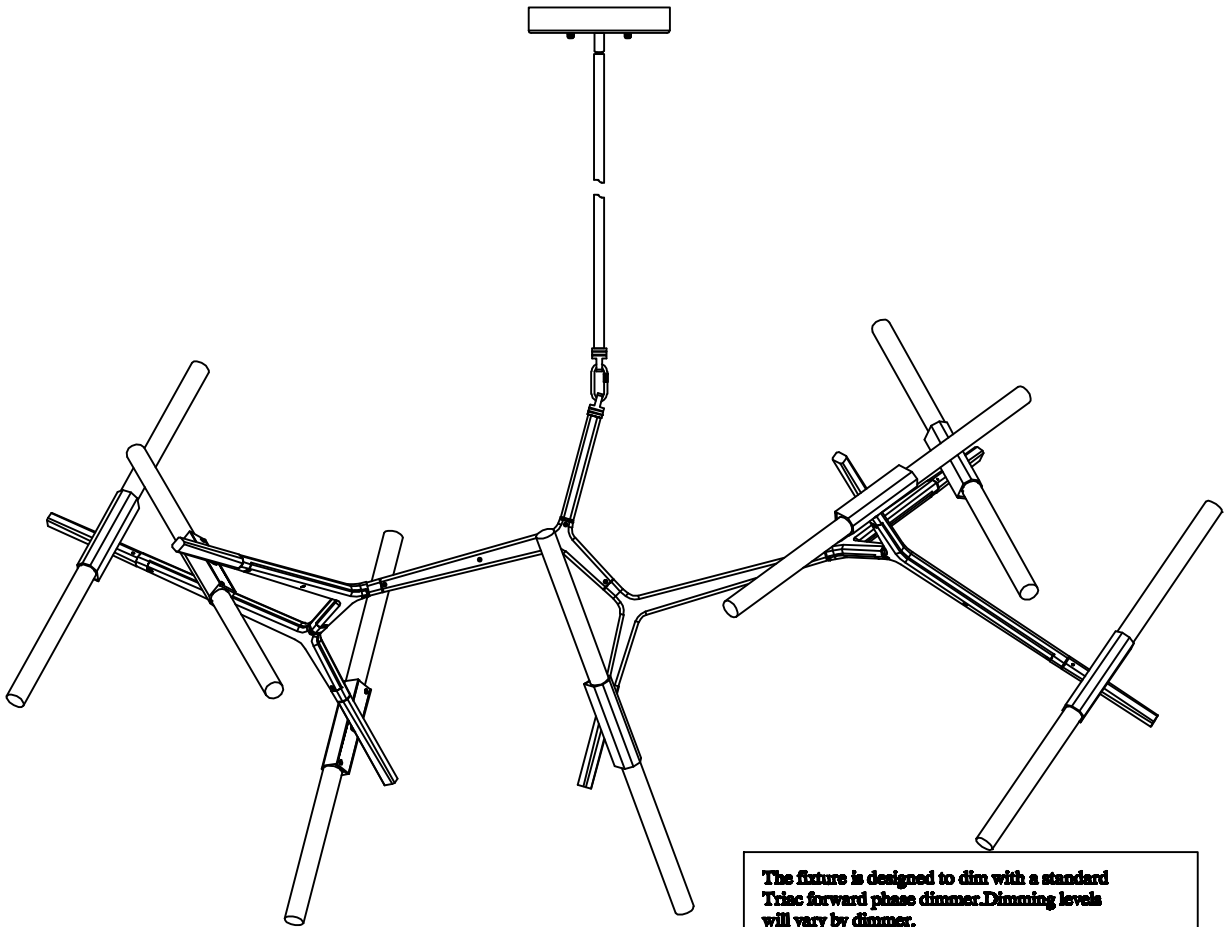

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:


Lutron MACL-153M
Lutron DVL-153P
Lutron SCL-153P
Leviton IPL06-10Z
Leviton 6674-POW

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.



Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

14 x 3W LED (integrated)


IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation

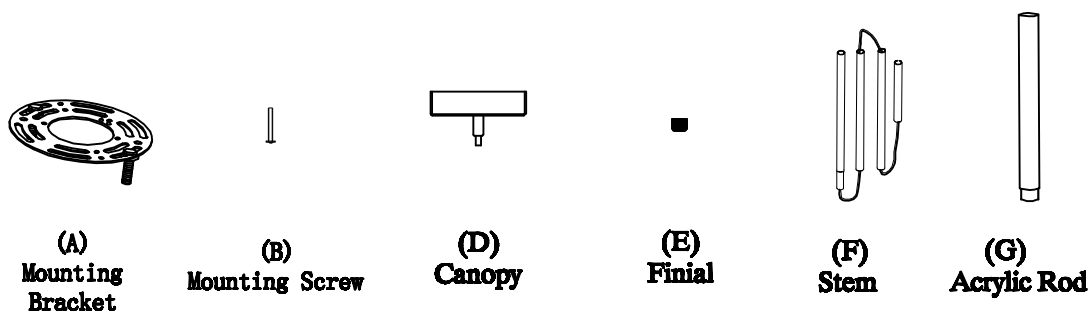


Locate all hardware & components before discarding packaging

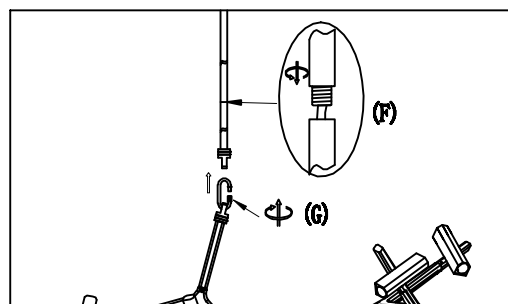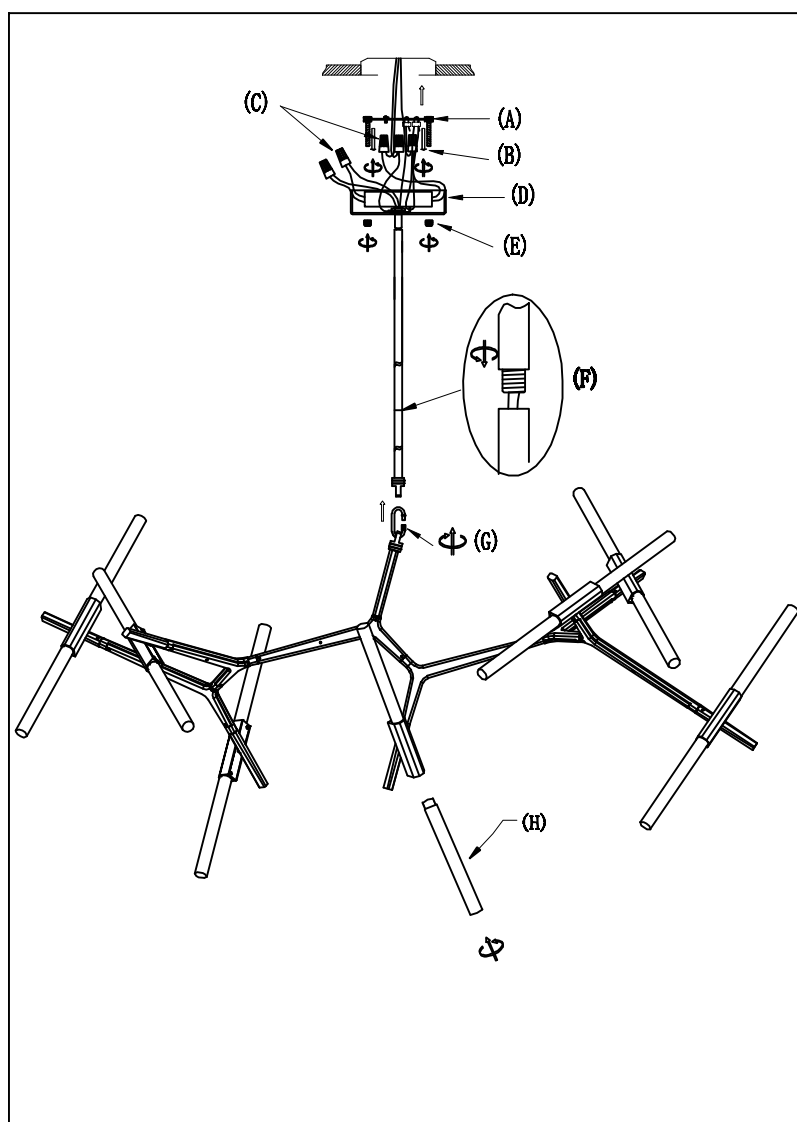

Step 1: Run wire through stems (F) and combine stem lengths to meet desired mounting height. Using carabiner (G) attach fixture to the stems.

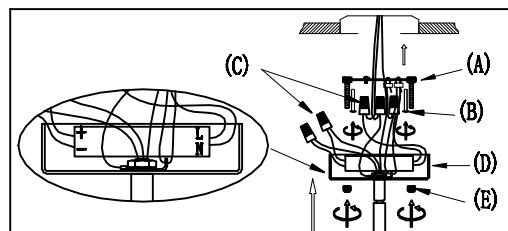

Step 2: Remove mounting bracket (A) from fixture and install to electrical box. Wire fixture (C) to wires in outlet box. Green wire is Ground wire. Attach the canopy (D) to the mounting bracket using finials (E) to secure.

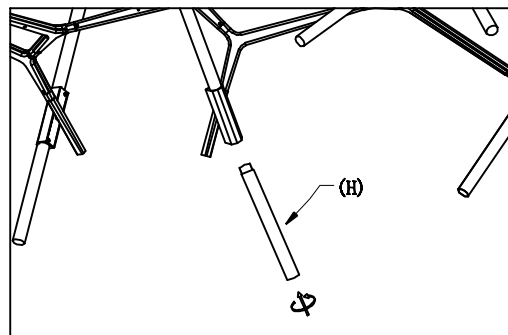

Step 3: Thread acrylic rod (G) onto fixture.

Cleaning & Care:

**Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.**