




Installation Instructions

Model E20700-20PC

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Install mounting bracket to electrical box
3. Wire input wires of driver transformer on fixture to wires in outlet box.
4. Connect copper ground wire to ground wire in electrical box.
5. Install fixture to bracket and tighten nuts so that fixture is secure
6. Install crystal strings to metal frame per diagram

For maximum dimming performance we recommend Lutron:MACL-153M DVELV-300P
Leviton:IPL-06 dimmers.

Drop off or blinking may occur at the low end of dimming cycle. If this occurs
adjust trim tab on CL dimmer until drop off/blinking subsides.

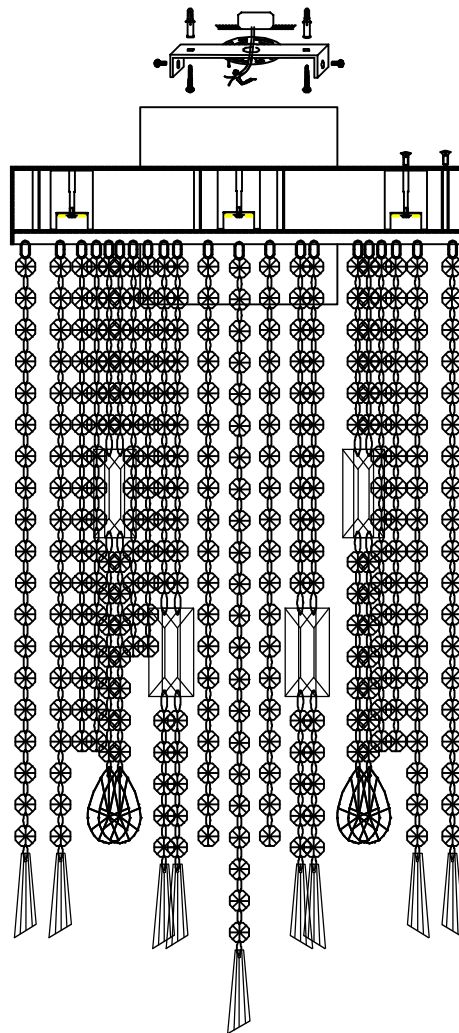




Contemporary
Lighting™

Installation Instructions

Model E20700-20PC

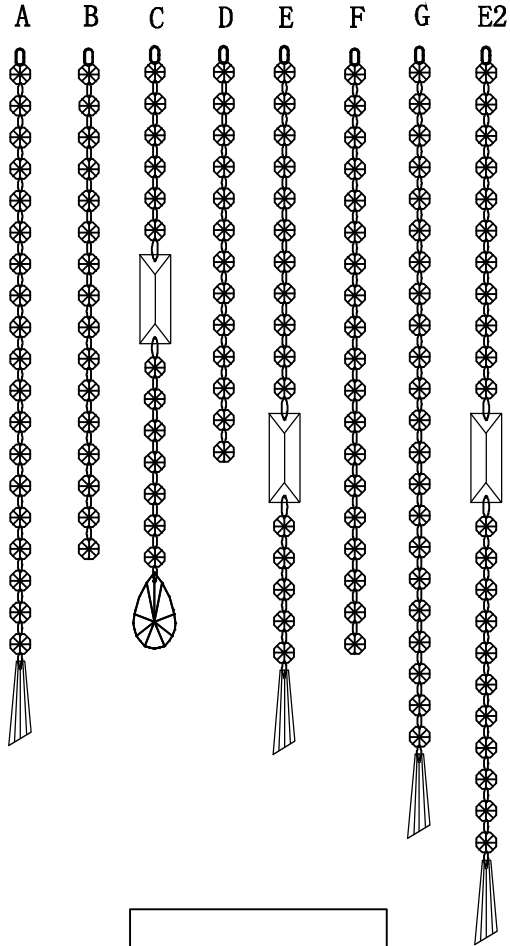

Code	CRY #	Qty	Length(inch)
A	ECRS20700-20A	4	19.1
B	ECRS20700-20B	4	13.6
C	ECRS20700-20C	4	15.9
D	ECRS20700-20D	4	11.22
E	ECRS20700-20E	2	18.5
F	ECRS20700-20F	4	16.14
G	ECRS20700-20G	2	21.5
E2	ECRS20700-20H	2	23.6

