




Contemporary Lighting

PRODUCT NAME: Cascada
ITEM NUMBER: E20791-20


Please consult your electrician for hanging fixture and wiring.

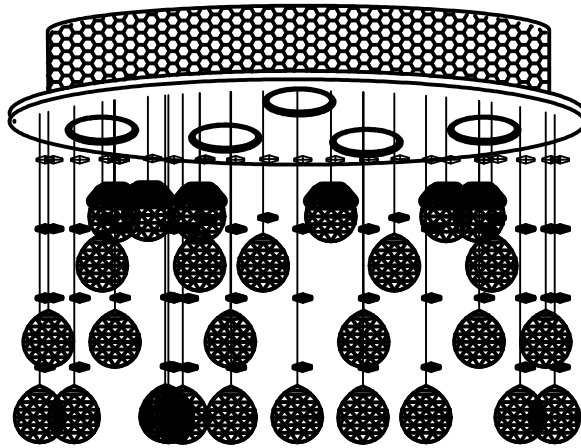


Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulb(included): 6*50 Watt Max Base Bulb


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

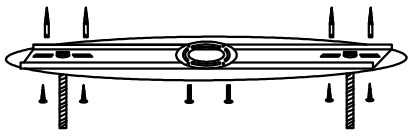

A

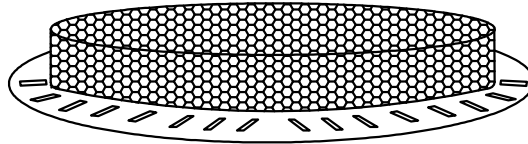


B




C

Locate all hardware & components before discarding packaging

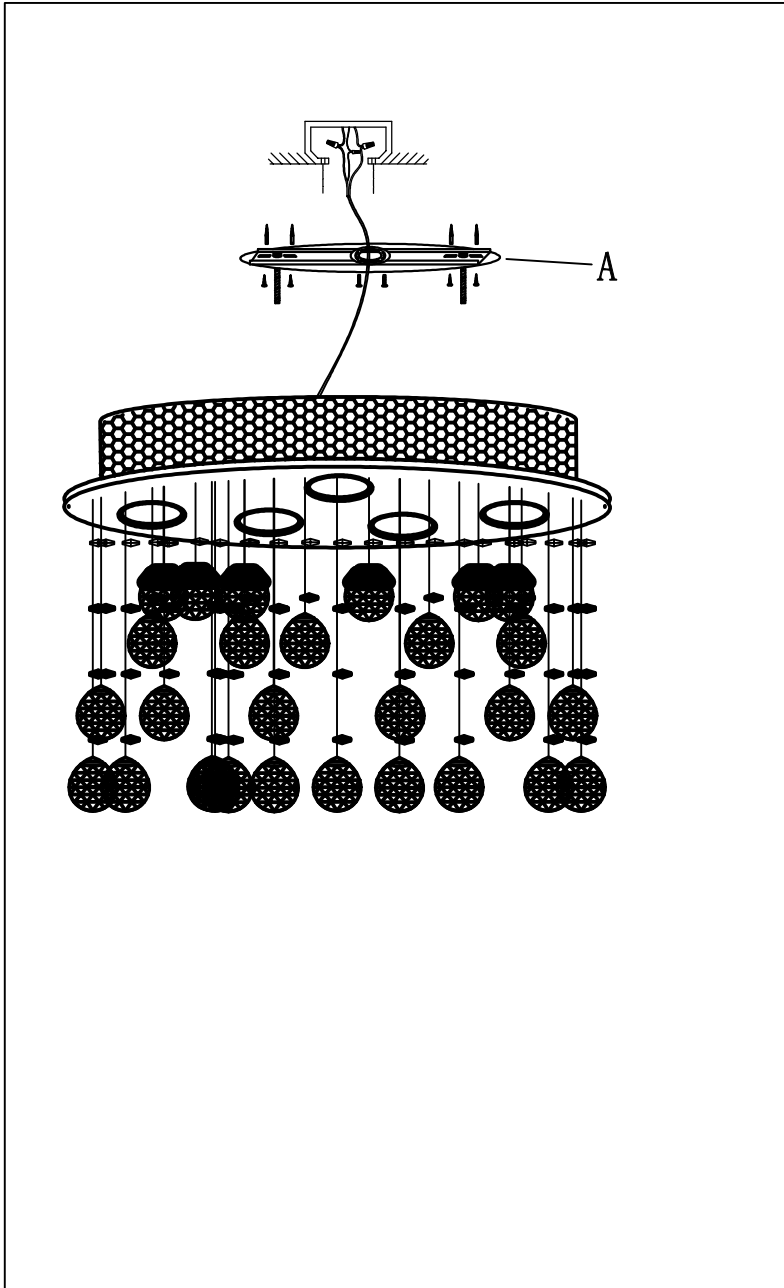


1.)




Step.1: Install mounting bracket (A) to the electrical box. Drill holes using 3/16"± drill bit where marked. Install mounting bracket to outlet box and attach anchors to secure fixture.

2.)

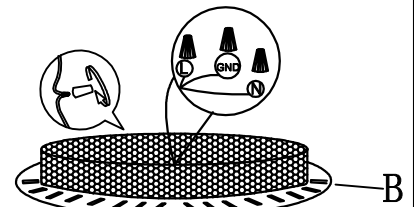


Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

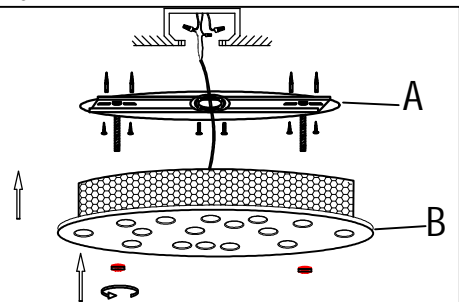

Step.3: Install canopy (B) to bracket (A) and tighten finials until flush with the ceiling.

4.)

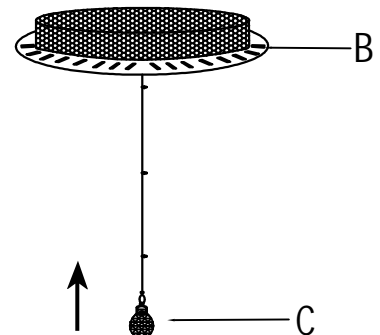



Step.4: Hang crystals (C) according to diagram on the following page.

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.



Contemporary
Lighting


Model E20791-20 Crystal Diagram

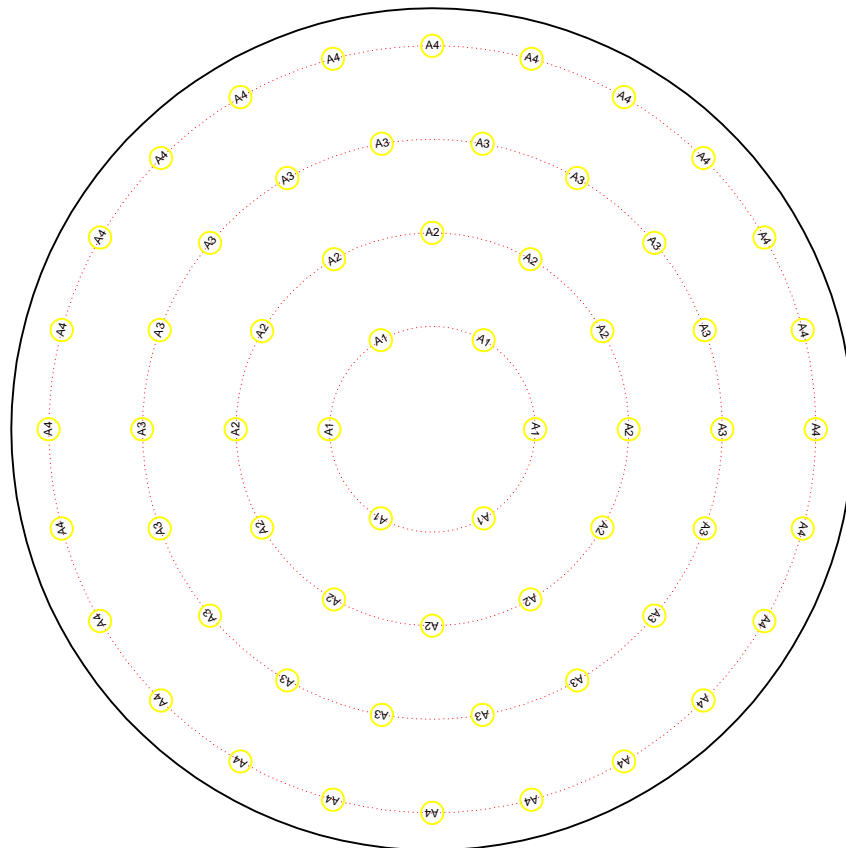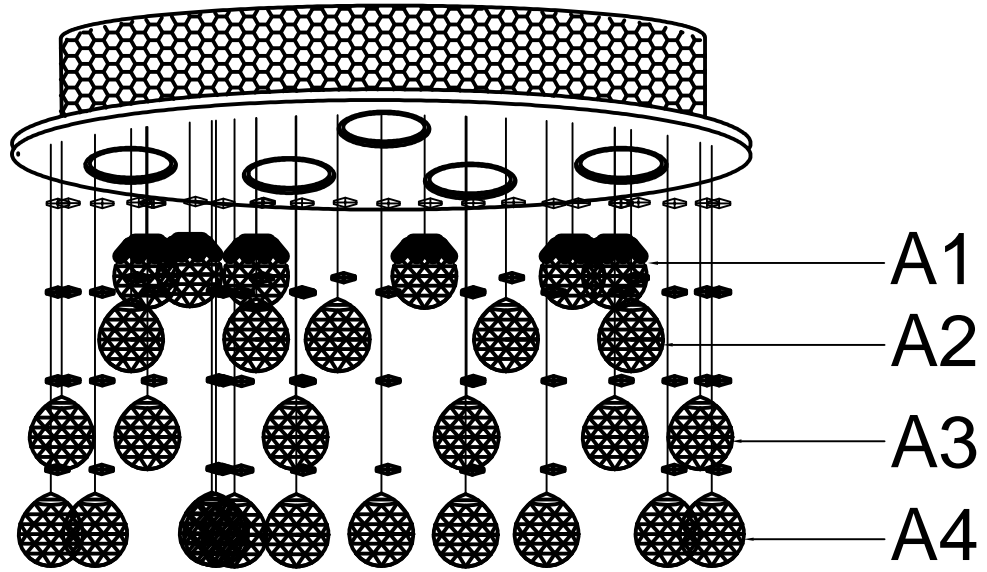






Contemporary
Lighting


Model E20791-20 Crystal Diagram

 A-60 (L: 1.58")
ECRY20791-20

 A1-6 (L: 2.2")
ECRY20791-A01

 A2-12 (L: 3.7")
ECRY20791-A02

 A3-18 (L: 6.1")
ECRY20791-A03

 A4-24 (L: 8.5")
ECRY20791-A04