


Contemporary Lighting



PRODUCT NAME: Cascada
ITEM NUMBER: E20796-20

Please consult your electrician for hanging fixture and wiring.

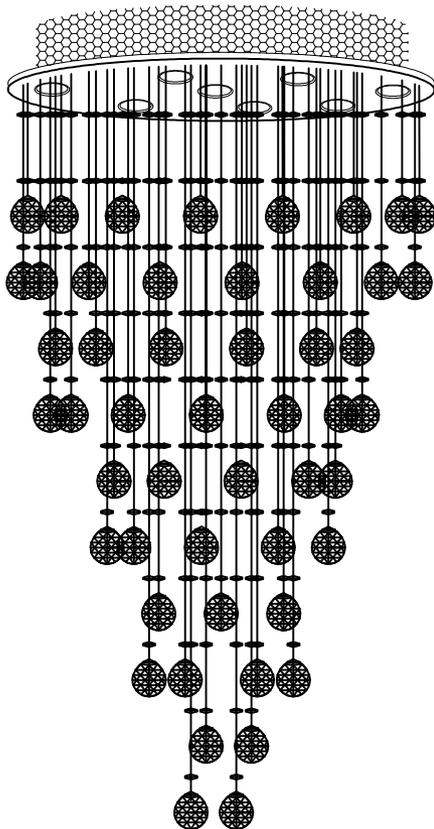


Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

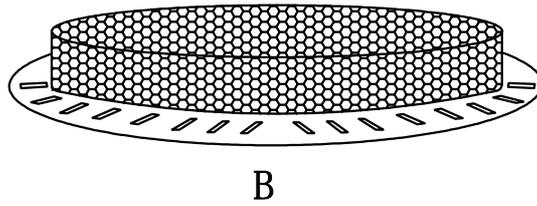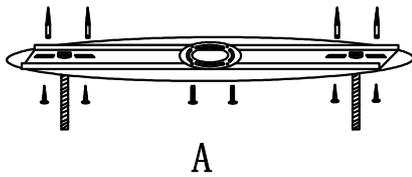

Locate all hardware & components before discarding packaging

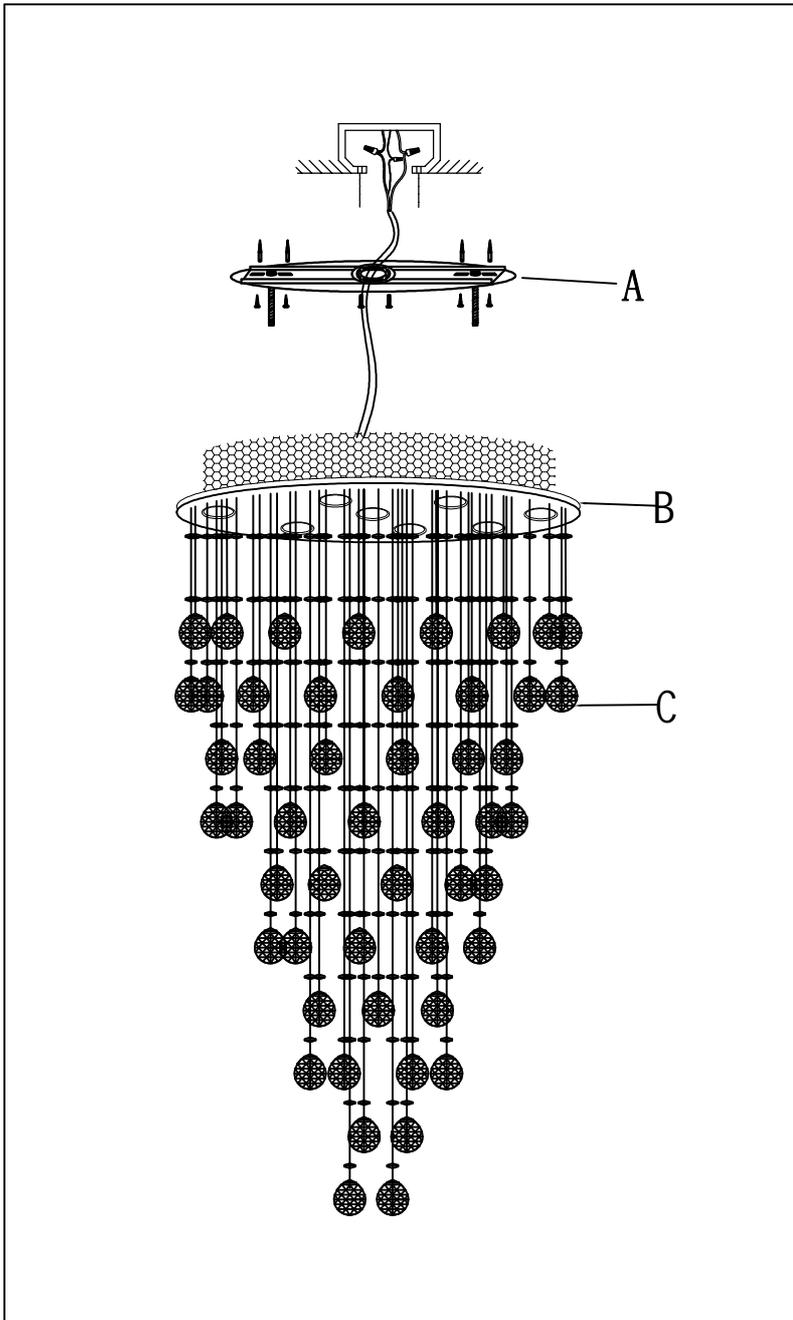


1.)




Step.1: Install mounting bracket (A) to the electrical box. Drill holes using 3/16" ± drill bit where marked. Install mounting bracket to outlet box and attach anchors to secure fixture.

2.)

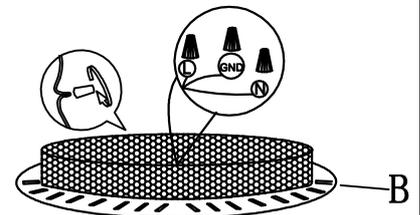


Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

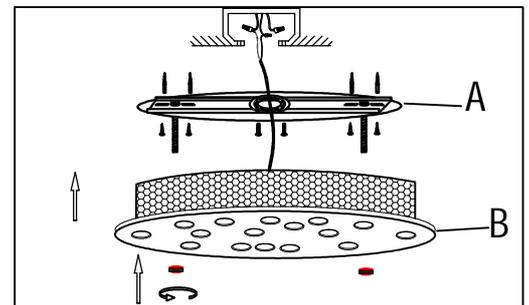

Step.3: Install canopy (B) to bracket (A) and tighten finials until flush with the ceiling.

4.)

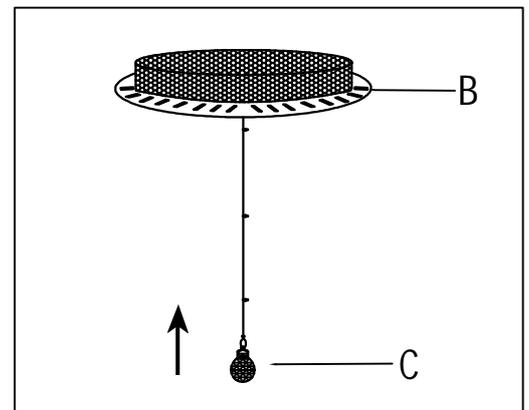

Step.4: Hang crystals (C) according to diagram on the following page.



Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.



Contemporary
Lighting

Model E20796-20 Crystal Diagram

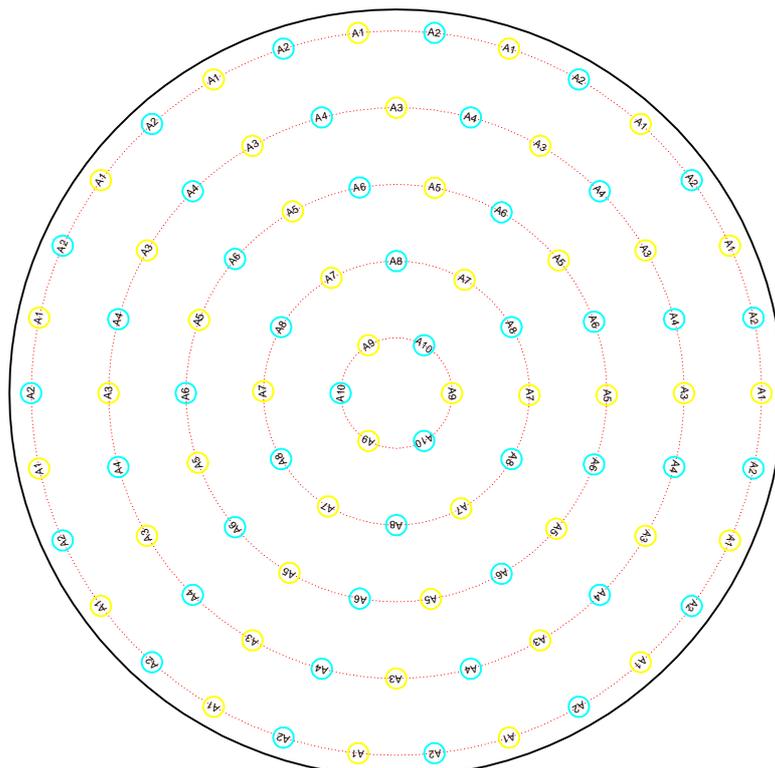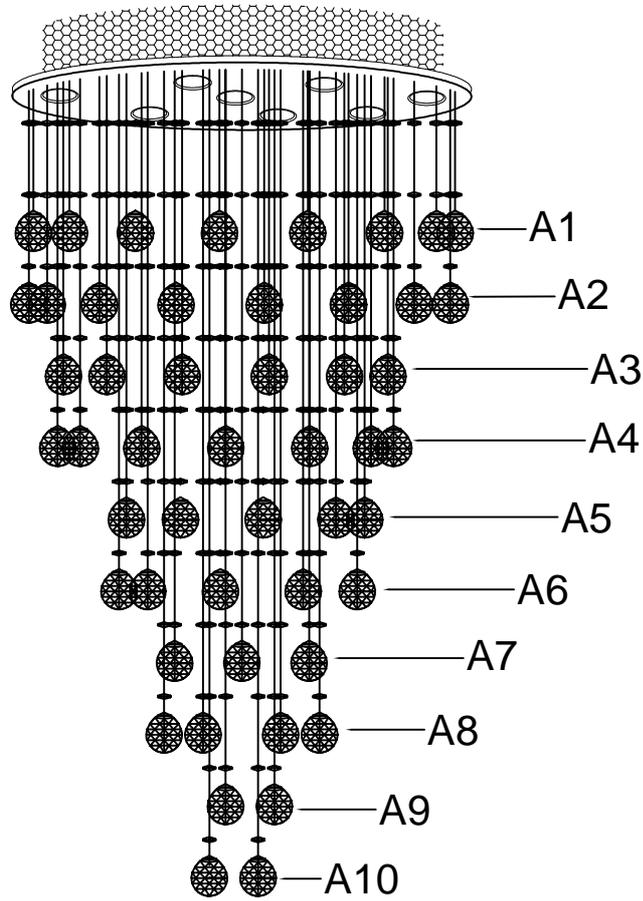



Model E20796-20
Crystal Diagram

A-90 (L: 1.58")
● ECRY20796-20

A1-15 (L: 3.9")
● ECRY20796-A01

A2-15 (L: 7.0")
● ECRY20796-A02

A3-12 (L: 10.2")
● ECRY20796-A03

A4-12 (L: 13.3")
● ECRY20796-A04

A5-9 (L: 16.5")
● ECRY20796-A05

A6-9 (L: 19.6")
● ECRY20796-A06

A7-6 (L: 22.8")
● ECRY20796-A07

A8-6 (L: 25.9")
● ECRY20796-A08

A9-3 (L: 29.1")
● ECRY20796-A09

A10-3 (L: 32.2")
● ECRY20796-A10