


# Contemporary Lighting

PRODUCT NAME: Cascada


ITEM NUMBER: E20797-20

Please consult your electrician for hanging fixture and wiring.

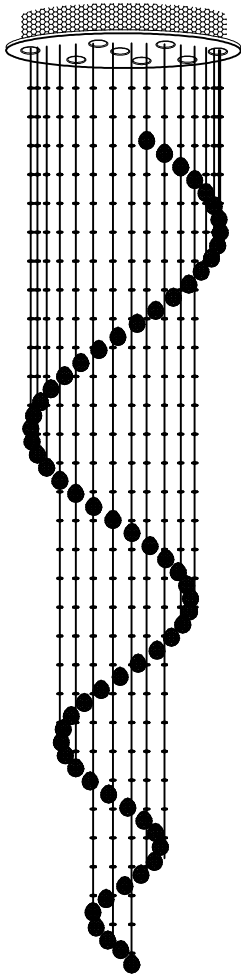


Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

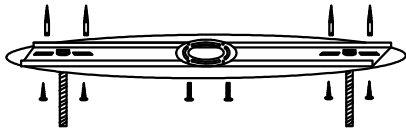

A

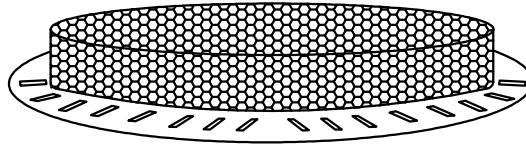


B




C

Locate all hardware & components before discarding packaging

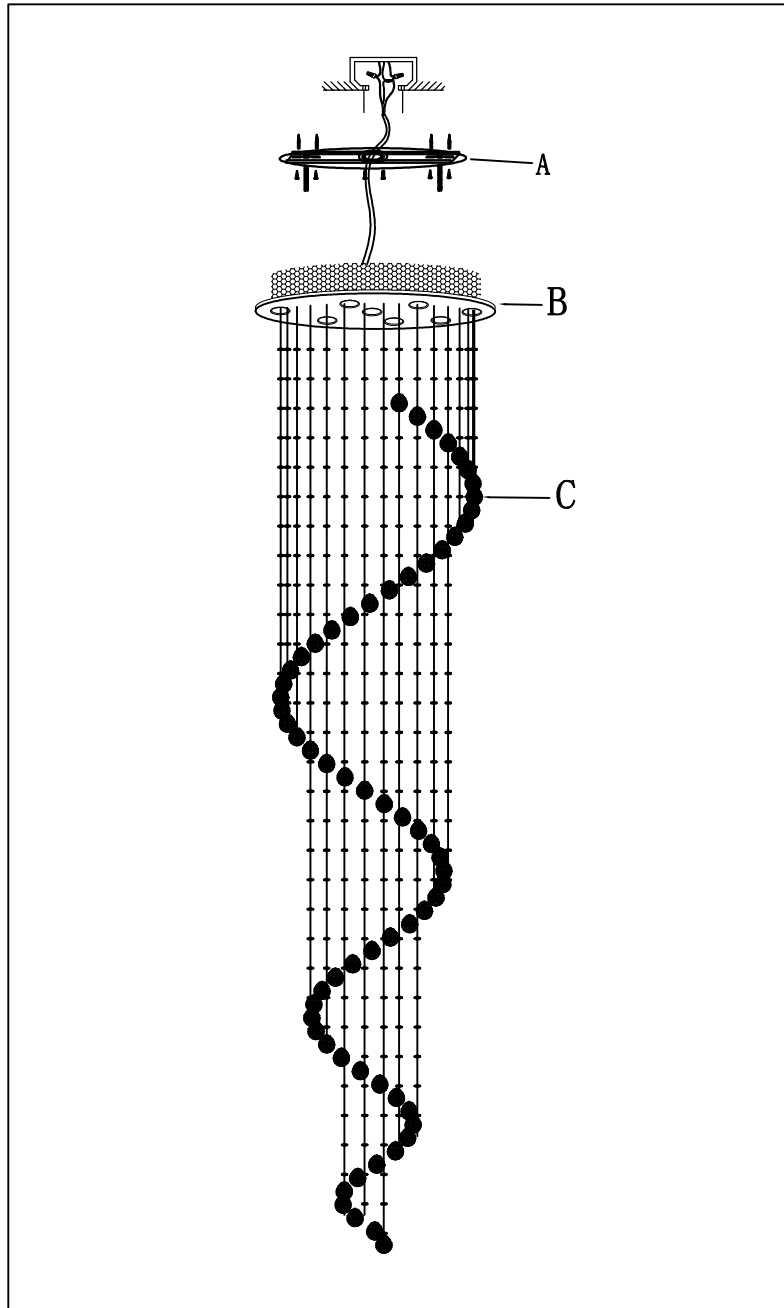


1.)




Step.1: Install mounting bracket (A) to the electrical box. Drill holes using 3/16" ± drill bit where marked. Install mounting bracket to outlet box and attach anchors to secure fixture.

2.)

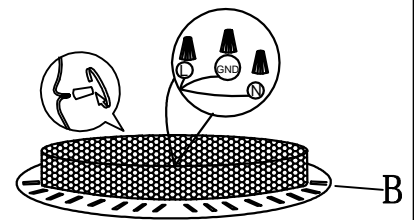


Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

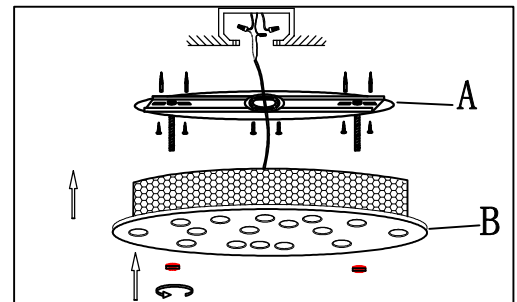

Step.3: Install canopy (B) to bracket (A) and tighten finials until flush with the ceiling.

4.)

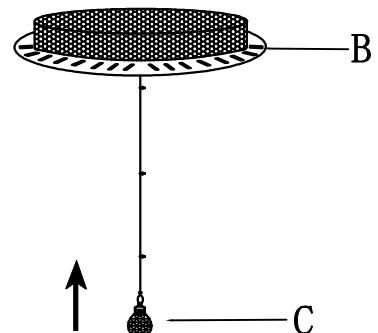



Step.4: Hang crystals (C) according to diagram on the following page.

#### Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.




# Model E20797-20 Crystal Diagram

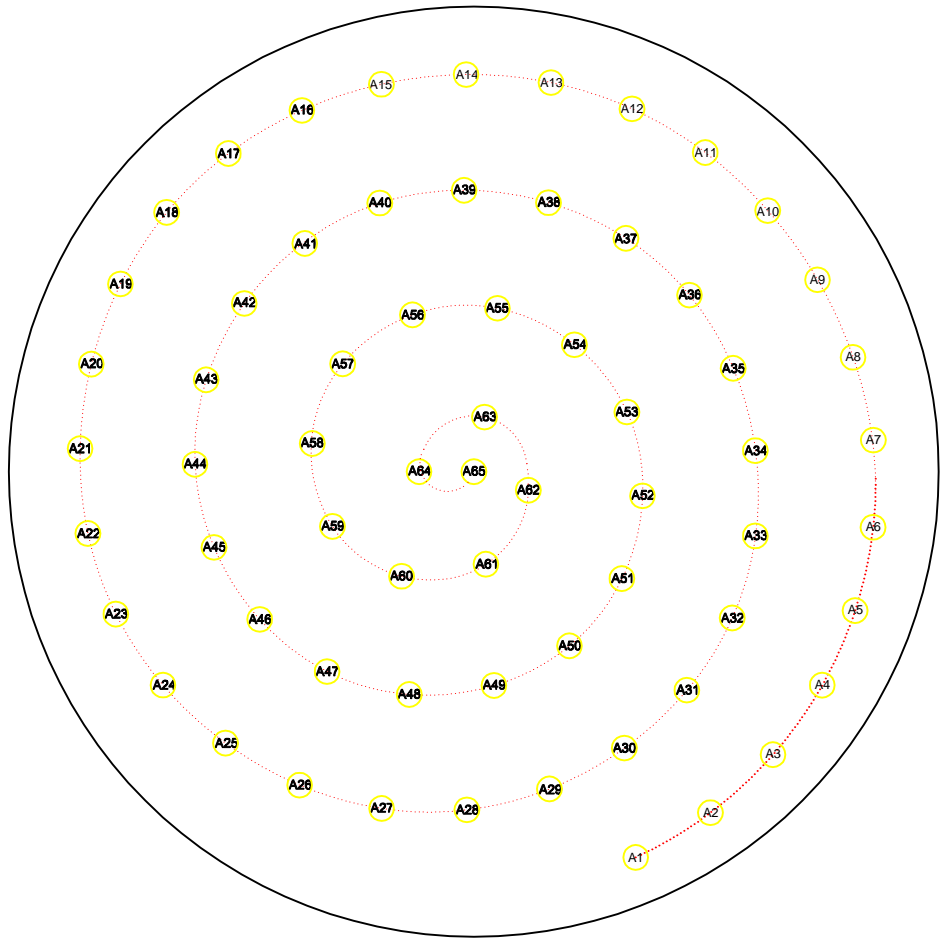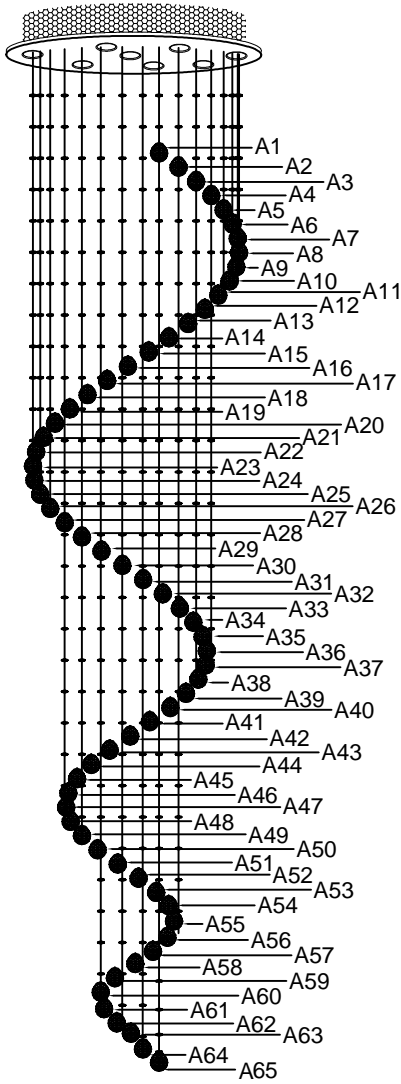



# Contemporary Lighting


## Model E20797-20 Crystal Diagram

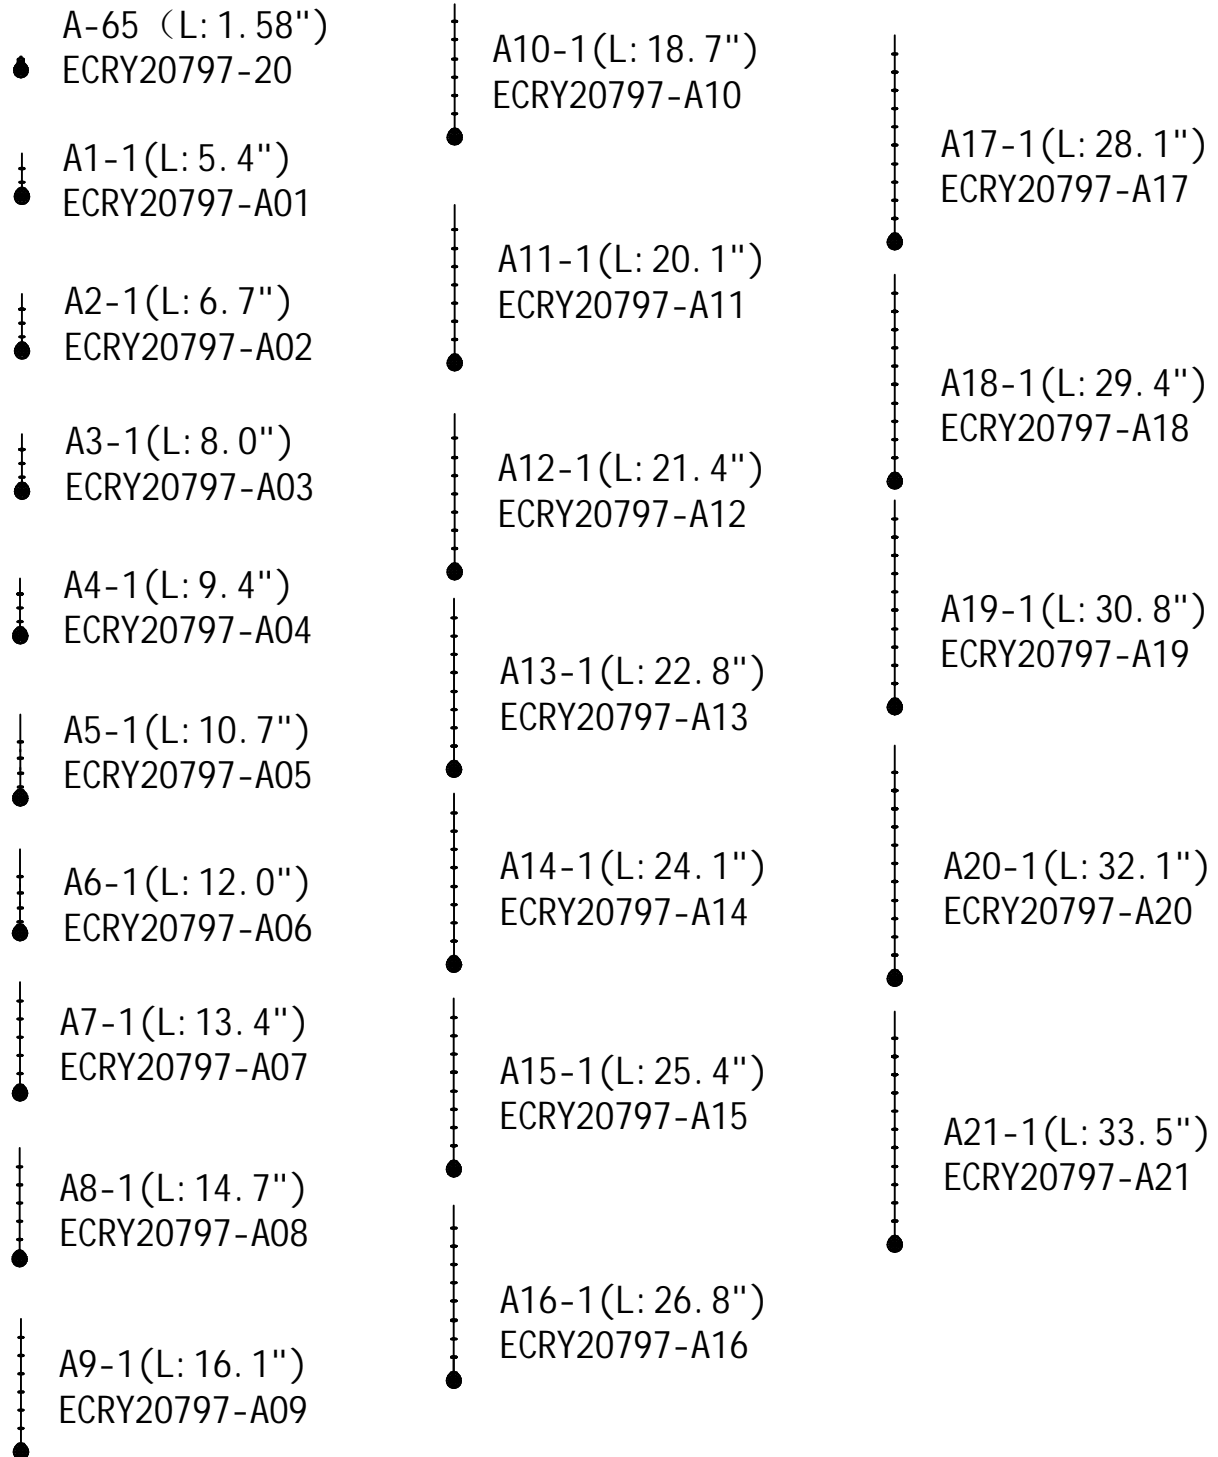



# Contemporary Lighting


## Model E20797-20 Crystal Diagram

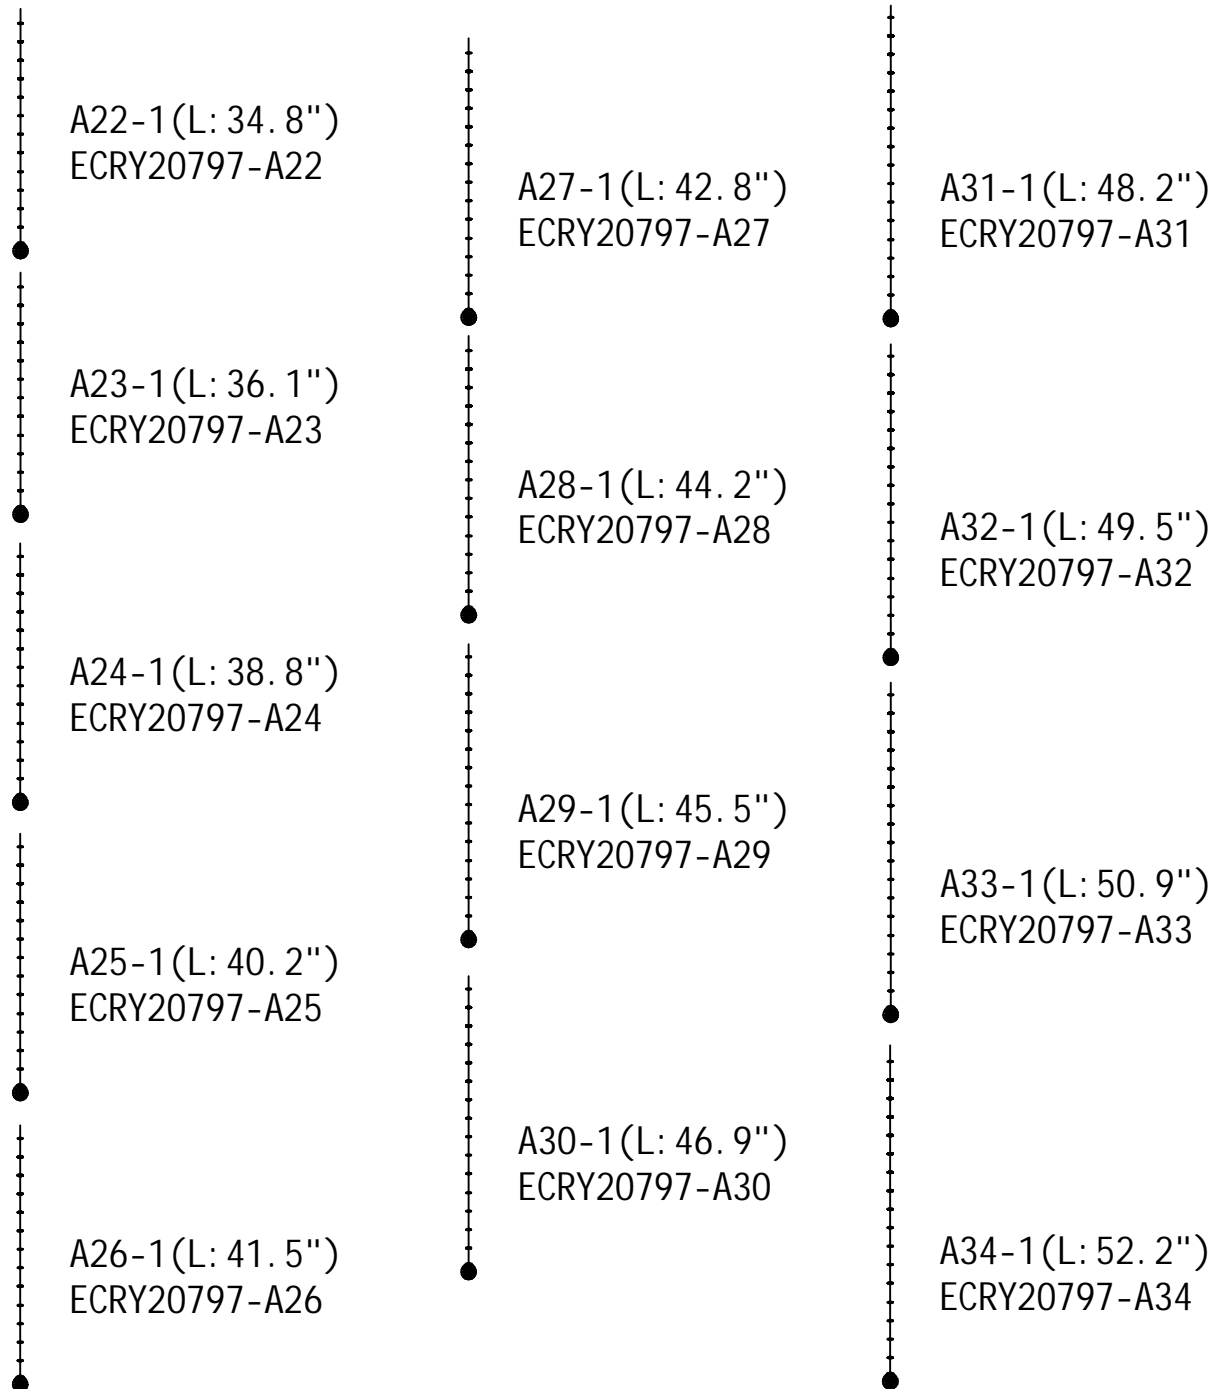



# Contemporary Lighting

## Model E20797-20 Crystal Diagram

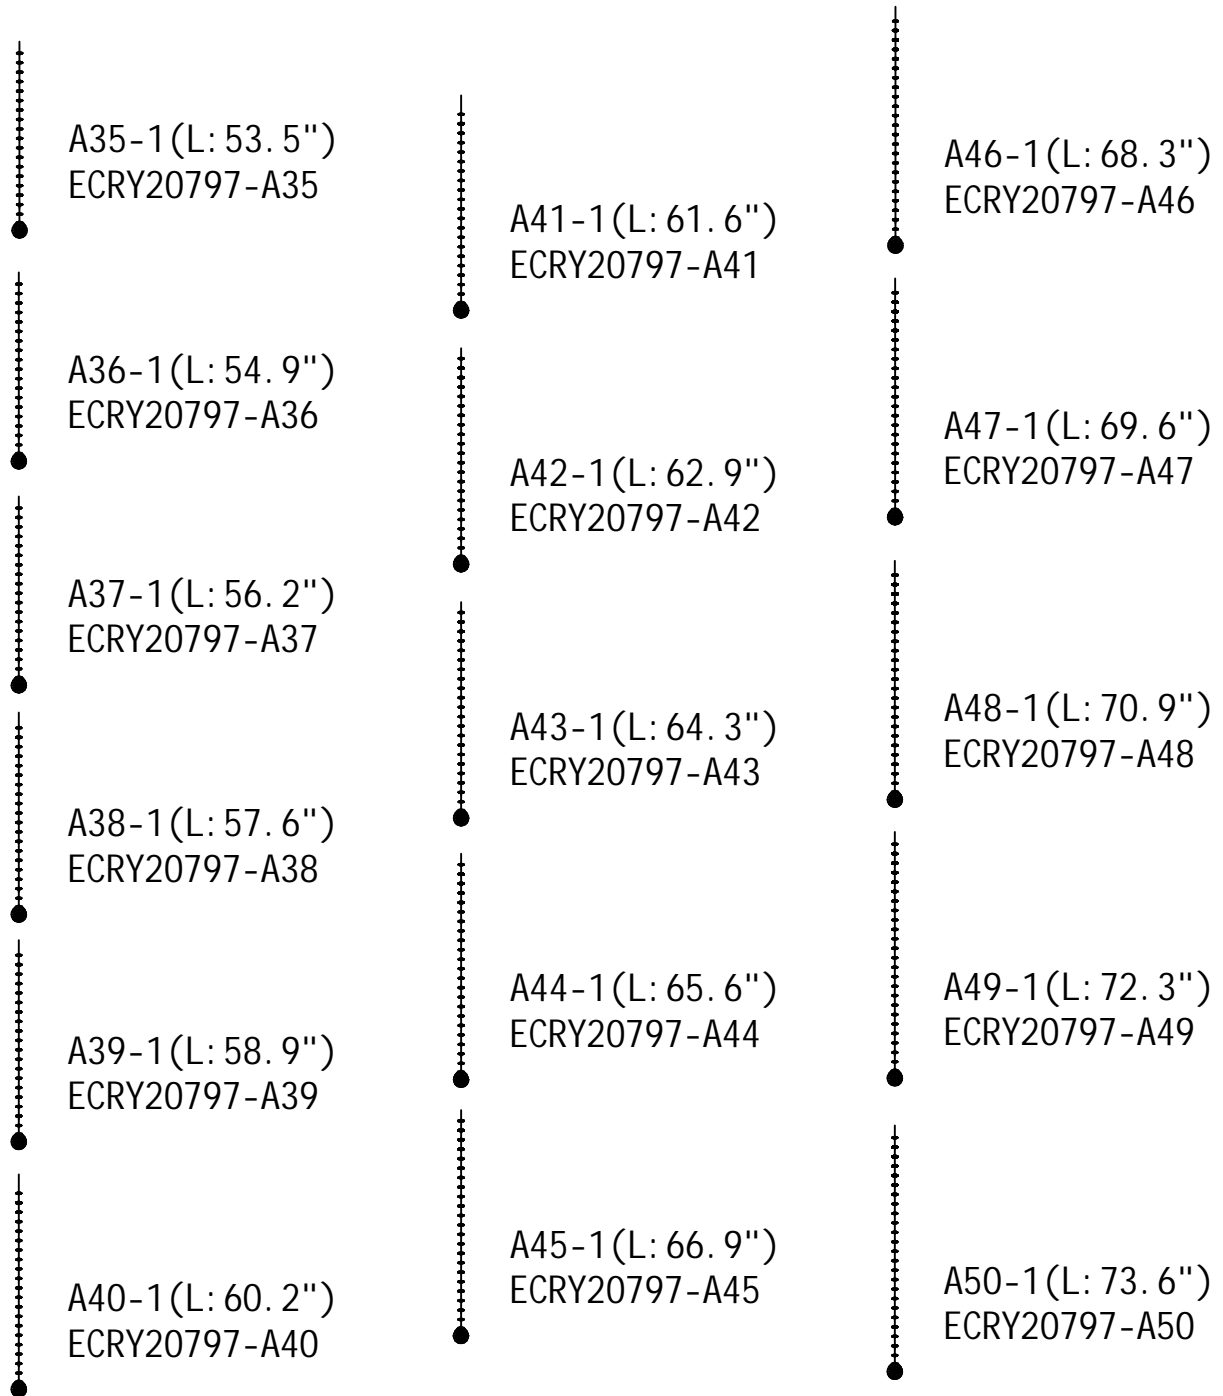



# Contemporary Lighting

## Model E20797-20 Crystal Diagram



A51-1(L: 75.0")  
ECRY20797-A51



A54-1(L: 79.0")  
ECRY20797-A54



A57-1(L: 83.0")  
ECRY20797-A57



A52-1(L: 76.3")  
ECRY20797-A52



A55-1(L: 80.3")  
ECRY20797-A55



A58-1(L: 84.3")  
ECRY20797-A58



A53-1(L: 77.6")  
ECRY20797-A53



A56-1(L: 81.7")  
ECRY20797-A56



A59-1(L: 85.7")  
ECRY20797-A59