


# Contemporary Lighting

PRODUCT NAME: Cascada


ITEM NUMBER: E20798-20

Please consult your electrician for hanging fixture and wiring.

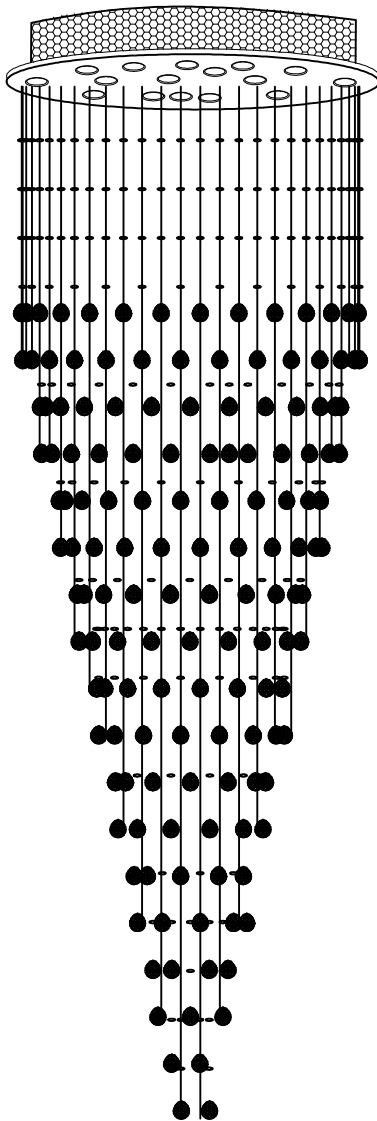


**Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.**


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

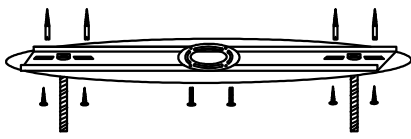

A

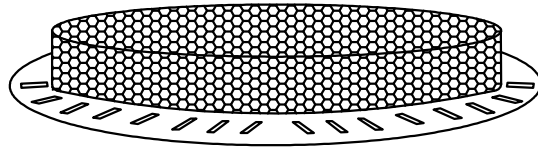


B




C

Locate all hardware & components before discarding packaging

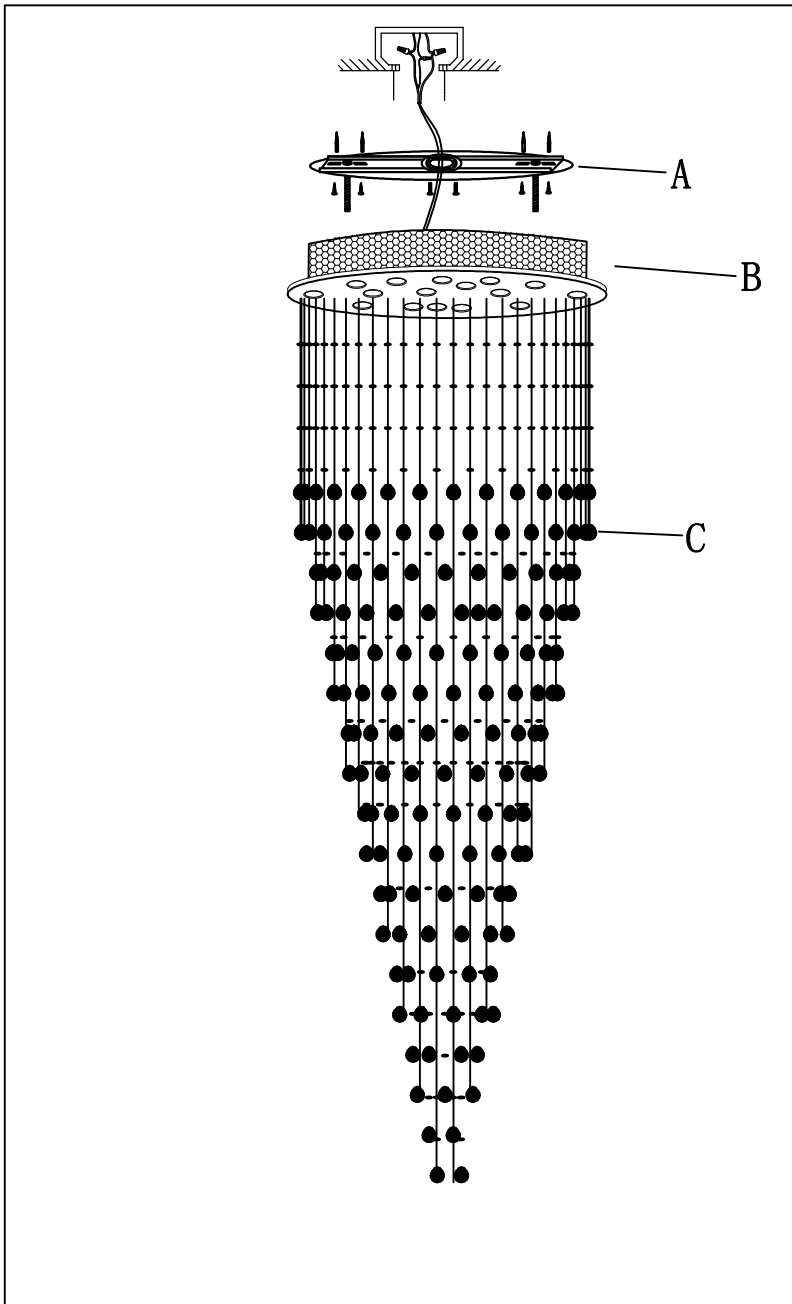


1.)




Step.1: Install mounting bracket (A) to the electrical box. Drill holes using 3/16"± drill bit where marked. Install mounting bracket to outlet box and attach anchors to secure fixture.

2.)

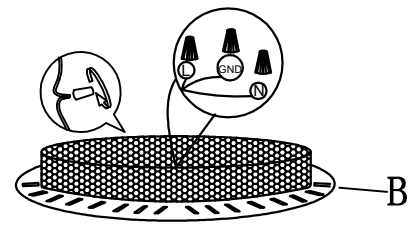


Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

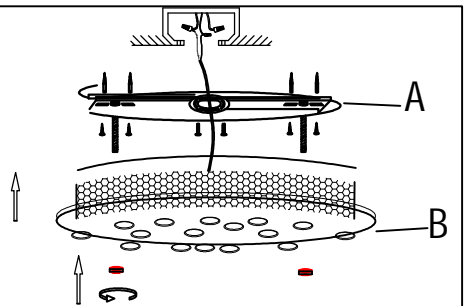

Step.3: Install canopy (B) to bracket (A) and tighten finials until flush with the ceiling.

4.)

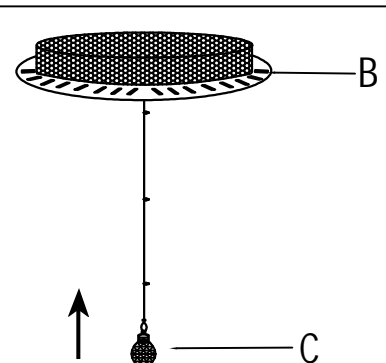

Step.4: Hang crystals (C) according to diagram on the following page.


**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.



Contemporary  
Lighting


## Model E20798-20 Crystal Diagram

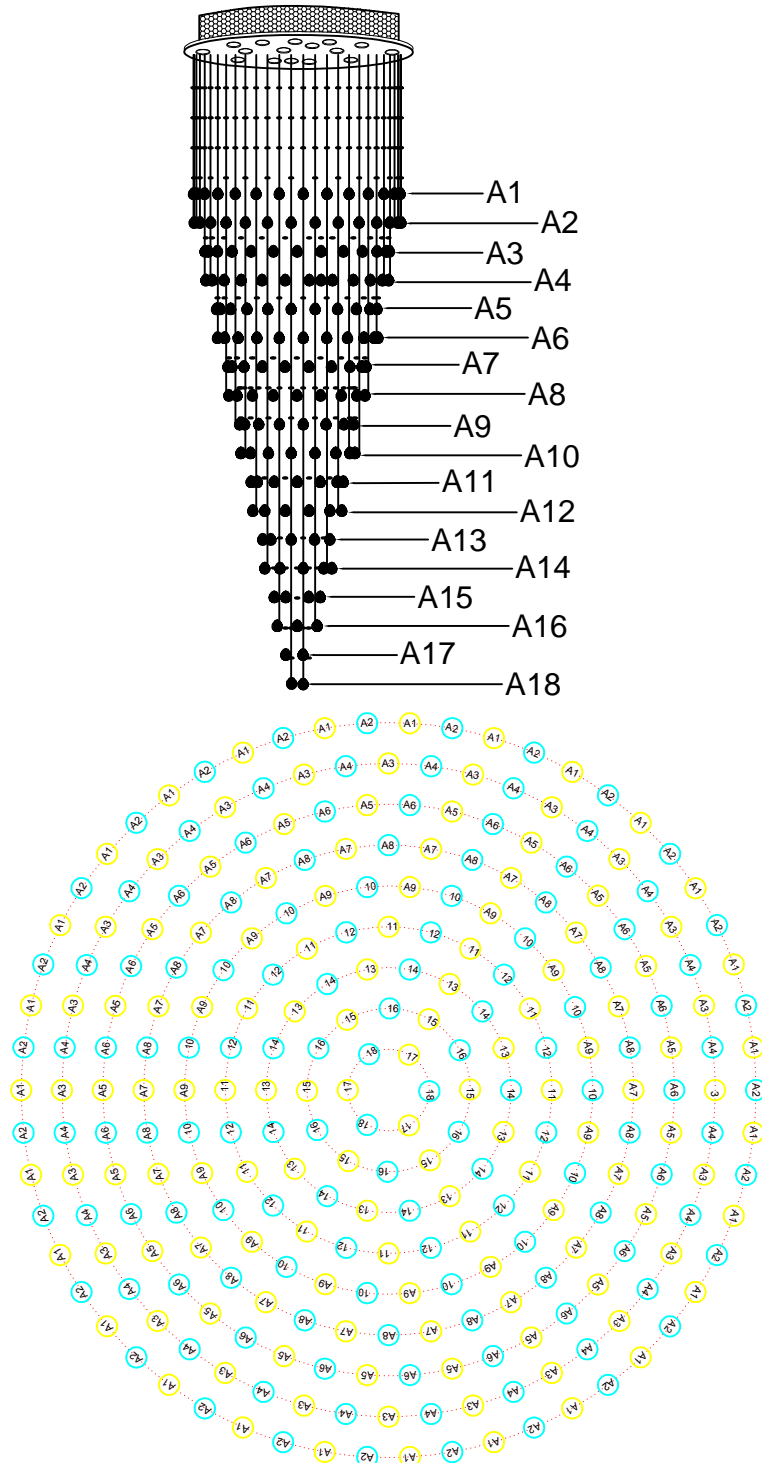



# Contemporary Lighting

## Model E20798-20 Crystal Diagram

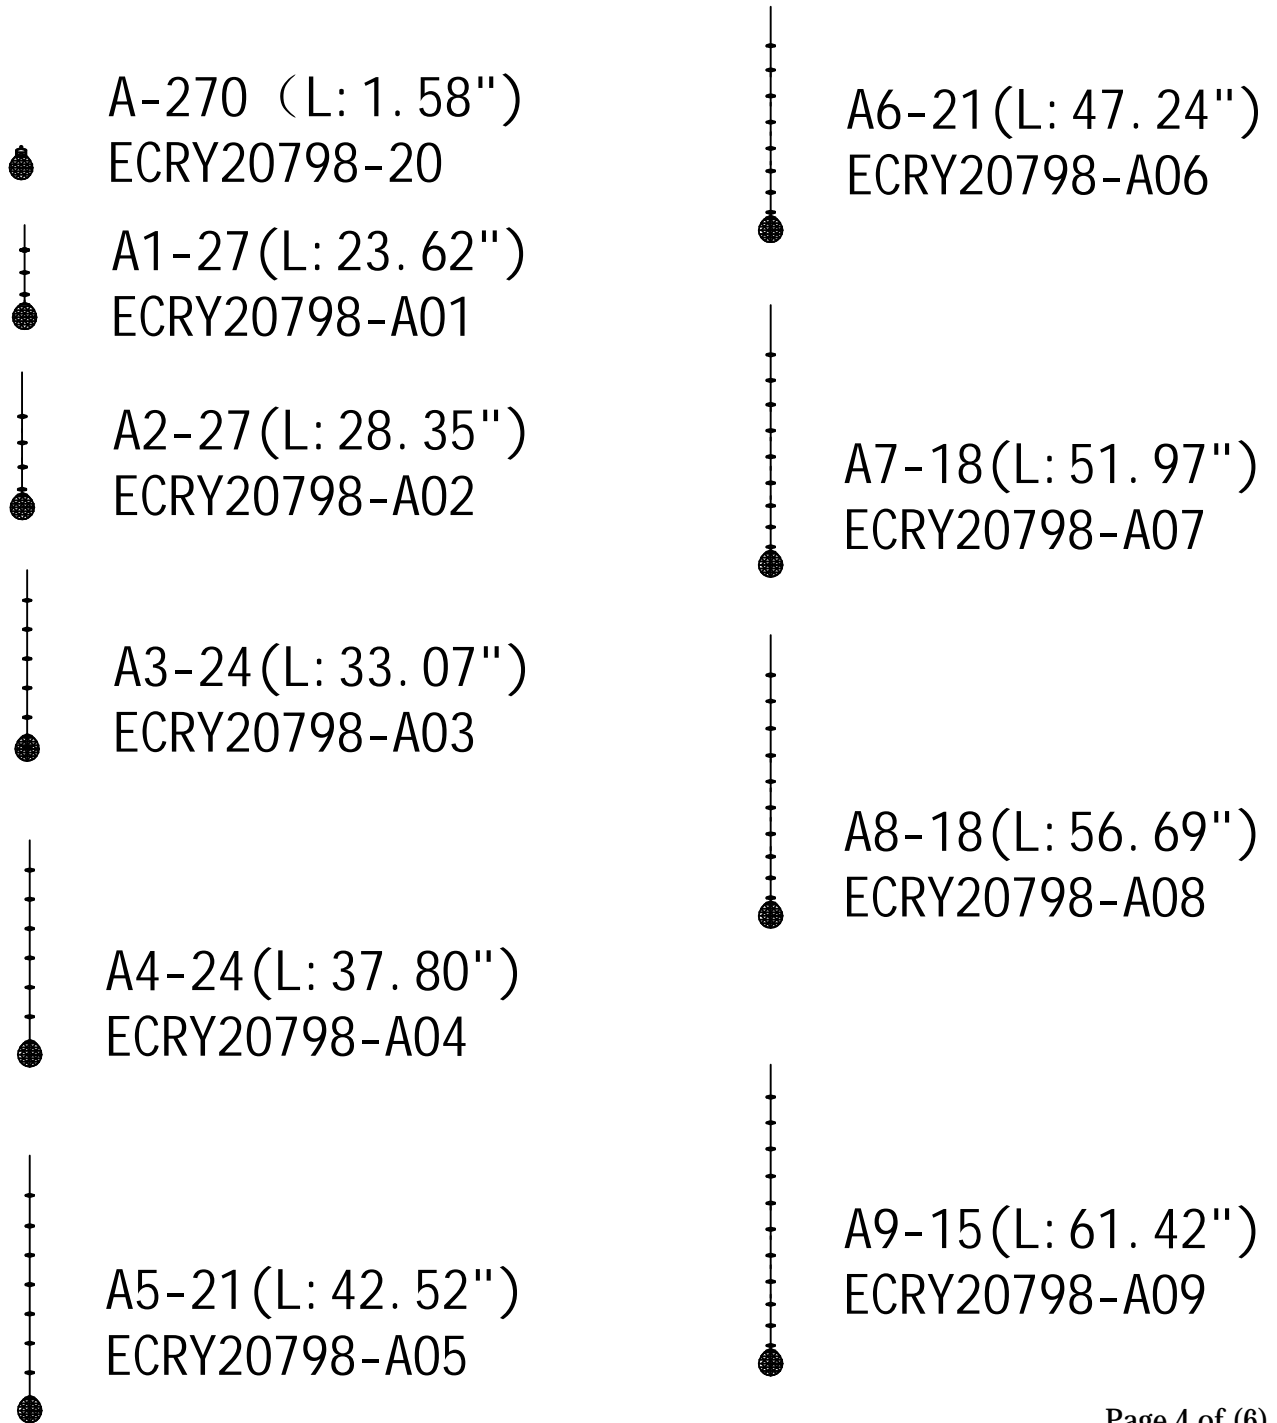



Contemporary  
Lighting


## Model E20798-20 Crystal Diagram



A10-15 (L: 66.14")  
ECRY20798-A10



A11-12 (L: 70.89")  
ECRY20798-A11



A12-12 (L: 75.59")  
ECRY20798-A12



A13-9 (L: 80.15")  
ECRY20798-A13



A14-9 (L: 85.09")  
ECRY20798-A14



Contemporary  
Lighting

Model E20798-20  
Crystal Diagram



A15-6(L: 89.76")  
ECRY20798-A15



A17-3(L: 99.21")  
ECRY20798-A17



A16-6(L: 94.49")  
ECRY20798-A16



A18-3(L: 103.94")  
ECRY20798-A18