
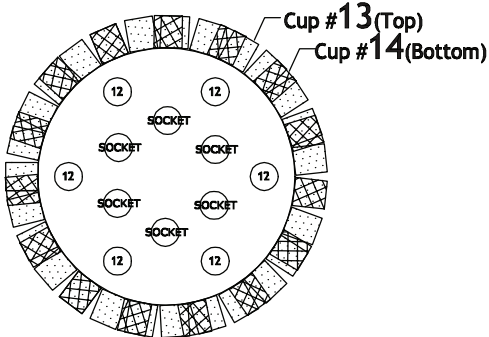
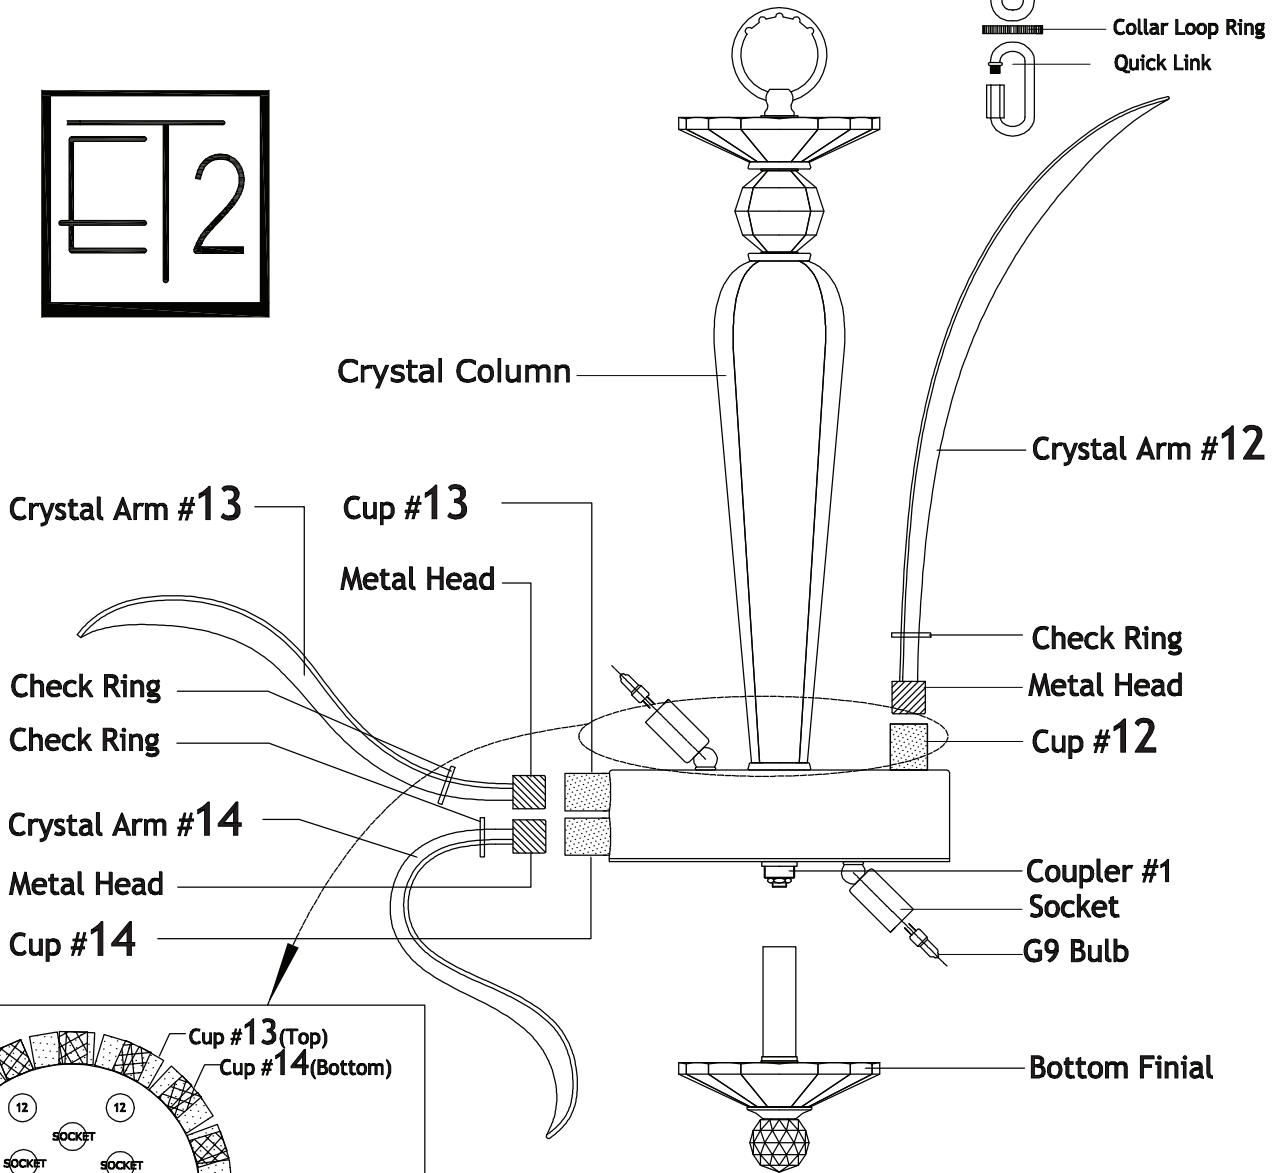
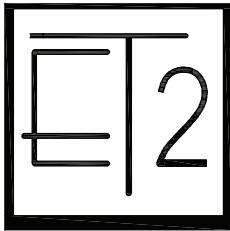


# PLUME

## ASSEMBLING INSTRUCTION

**!! Please use the gloves enclosed before handing any parts or crystal**

1. Hang the fixture, please refer to the installation instruction enclosed for installation and wiring.
2. Insert Crystal arm #12 into Cup #12. Remove label prior to installing crystal. The magnet will hold the arm in place. Snap Check Ring onto Cup.
3. Repeat Step 2 for Crystal Arm #13 and #14. Please refer to the DISTRIBUTION DIAGRAM for positioning.
4. Thread Bottom Finial to Coupler #1.
5. Install the G9 Bulbs(Enclosed) to the Sockets.

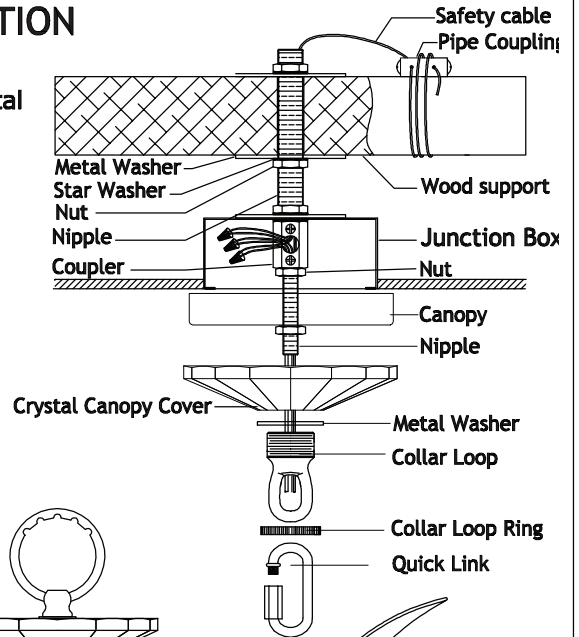

**DISTRIBUTION DIAGRAM**

**MODEL E20972-20**

For missing parts or installation questions call 1-800-486-2946

<b>COMPONENT LIST</b>			
<b>No.</b>	<b>Component</b>	<b>Q'ty</b>	<b>Replacement Part No.</b>
01	Canopy Kit		
	Wire Nut	3Pcs	
	Nipple (1/2"-18)	1Pc	
	Collar Loop	1Pc	
	Chain	1Pc	
	Crystal Canopy Cover	1Pc	
	Ground Screw	1Pc	
	Star Washer	4Pcs	
	Mounting Screws	2Pcs	
	Metal Washer	3Pcs	
	Metal Washer	1Pc	
	Coupler	1Pc	
	Nipple (5/8")	1Pc	
	Hex nut(5/8)	3Pcs	
	Hex nut(1/2"-18)	2Pcs	
	Canopy	1Pc	
	Quick Link	2Pcs	
	Pipe Coupling	1Pc	
Mounting Screws(1/4")	2Pcs		
02	G9 Bulb	10Pcs	
03	Crystal Arm #12	6Pcs	
04	Crystal Arm #13	27Pcs	
05	Crystal Arm #14	15Pcs	
06	Bottom Finial	1Pc	
07	Glove	1pair	