




PRODUCT NAME: Phase LED Wall Sconce
ITEM NUMBER: E21420-MW

Please consult your electrician for hanging fixture and wiring.

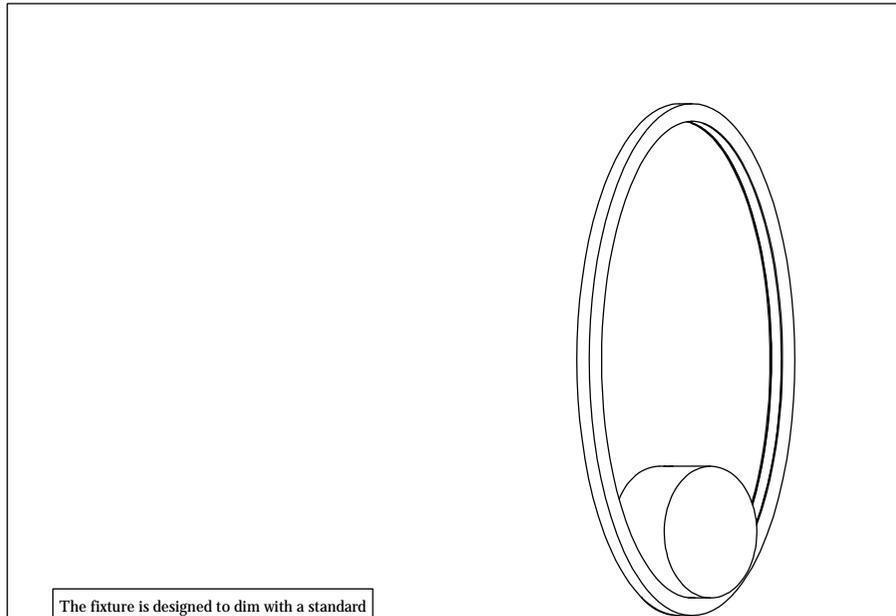

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

- Lutron MACL-153M
- Lutron DVL-153P
- Lutron SCL-153P
- Leviton IPL06-10Z
- Leviton 6674-POW

Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer

WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONNECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




(A)
Mounting Bracket




(B)
Body

Locate all hardware & components before discarding packaging

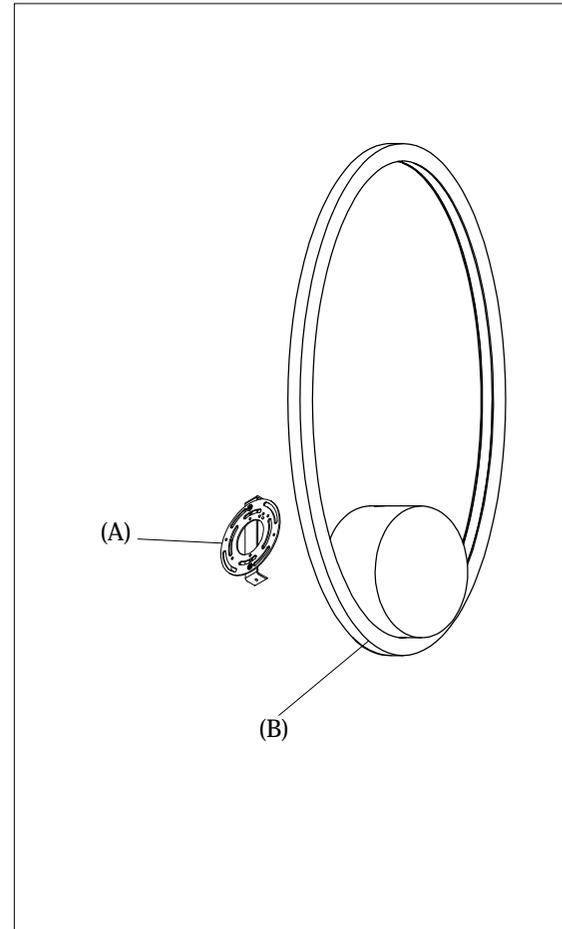


1.)

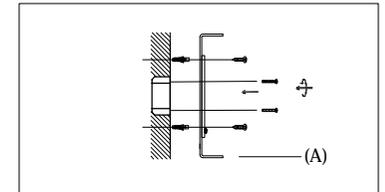


Step 1: Remove Bracket (A) from fixture and install to electrical box.

2.)

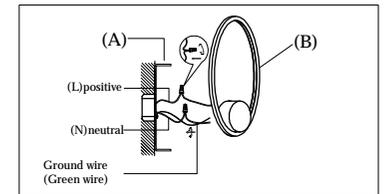

Step 2: Wire fixture to wires in outlet box. Install Green wire to Ground Screw.

3.)

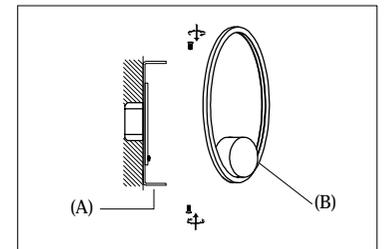

Step 3: Install Body (B) to Canopy (A) and tighten screws on the sides of the canopy to secure.