


# Contemporary Lighting™

PRODUCT NAME:Mermaid 1LT Pendant  
ITEM NUMBER: E21441

Please consult your electrician for hanging fixture and wiring.

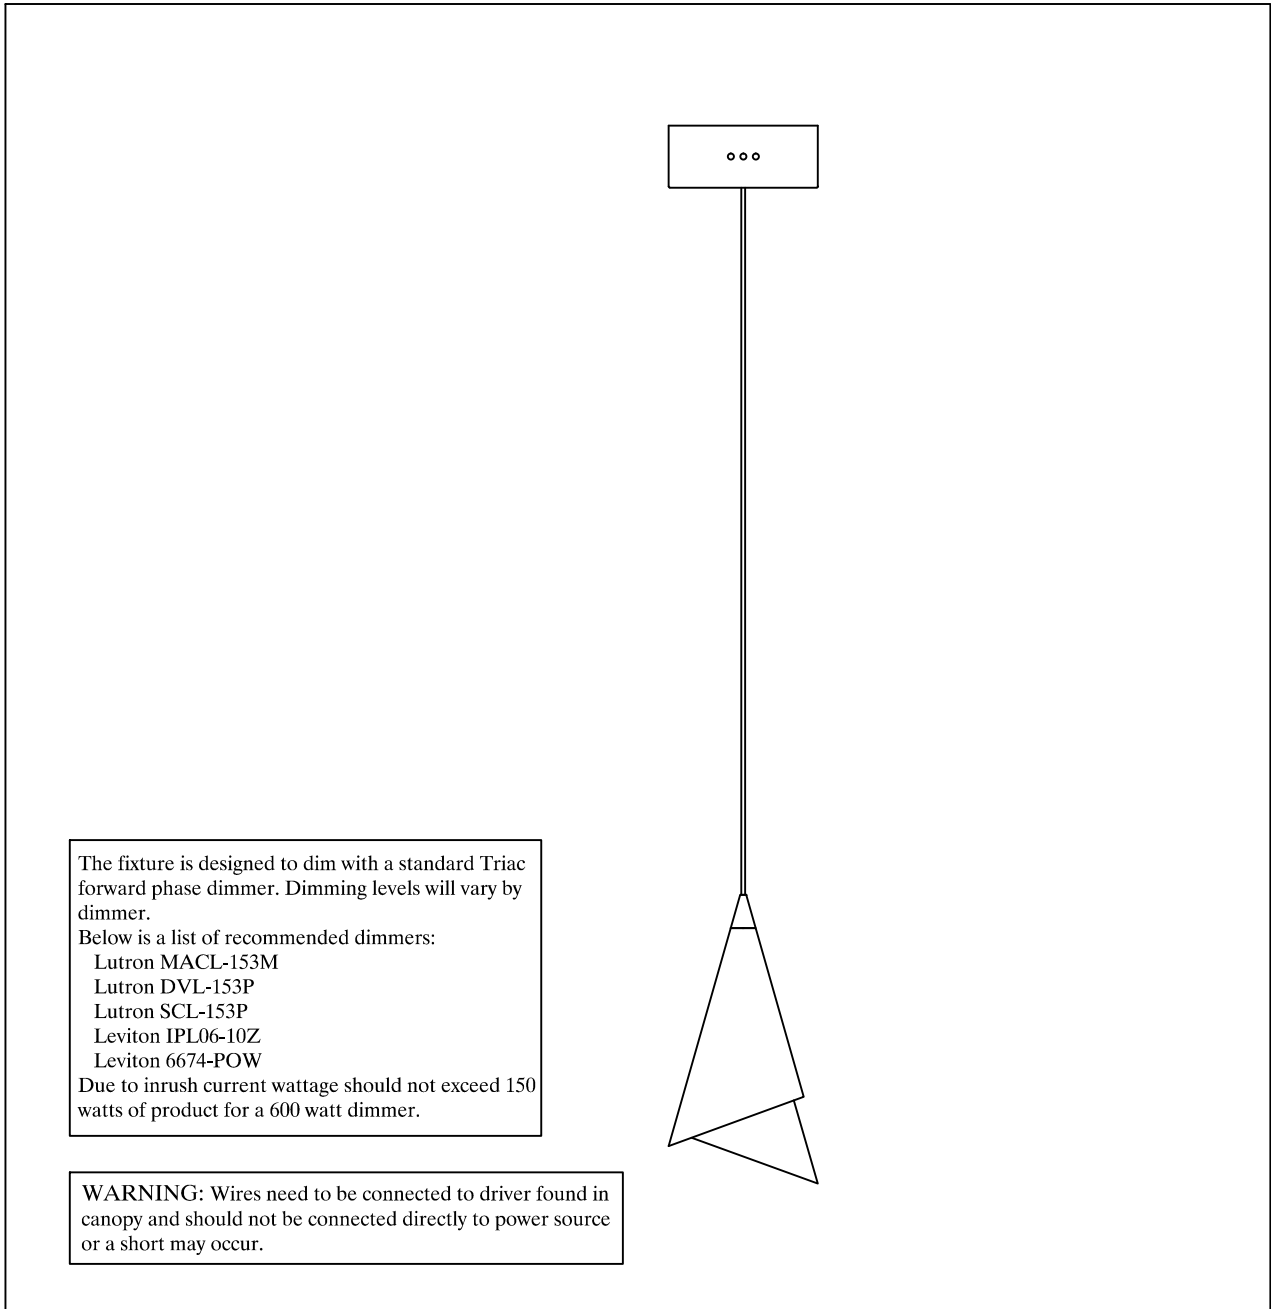

Bulb ( Included ):1\*LED\*7.2W

**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation




Bracket (A)



Screws(B)





Mounting Screws(C)




Canopy(D)


Locate all hardware & components before discarding packaging

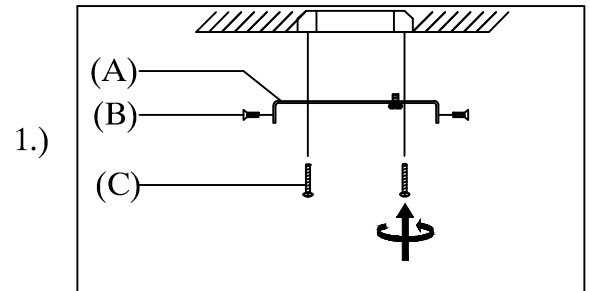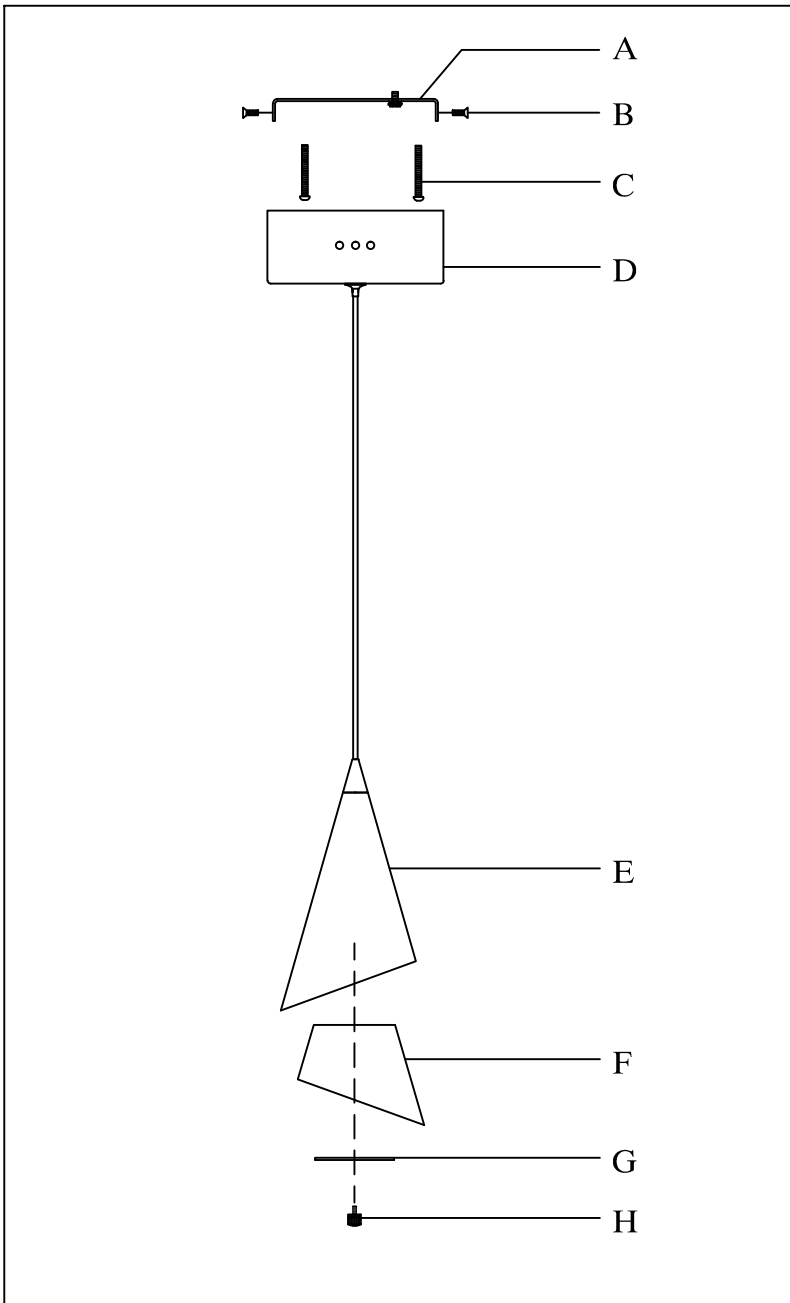

Step1 :Remove mounting bracket from fixture and install to electrical box.

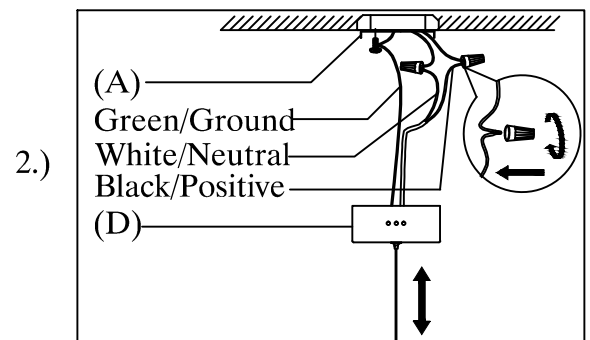

Step2 :Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Wire fixture to wires in outlet box. Green wire is for Ground.

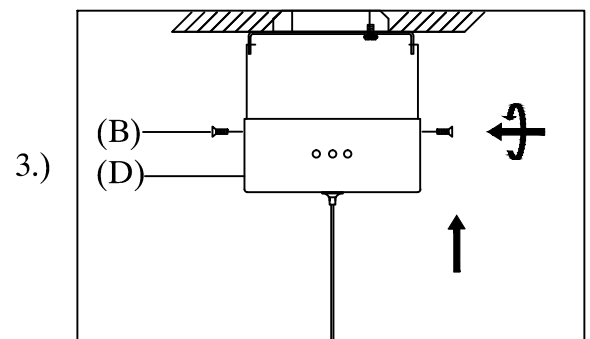


Step3 :Install fixture to bracket and Screws at the ends of the canopy to secure.


**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation



Slanting  
lampshade  
(E)



Golden  
lampshade  
(F)




Acrylic(G)




Striped nut(H)

Locate all hardware & components before discarding packaging

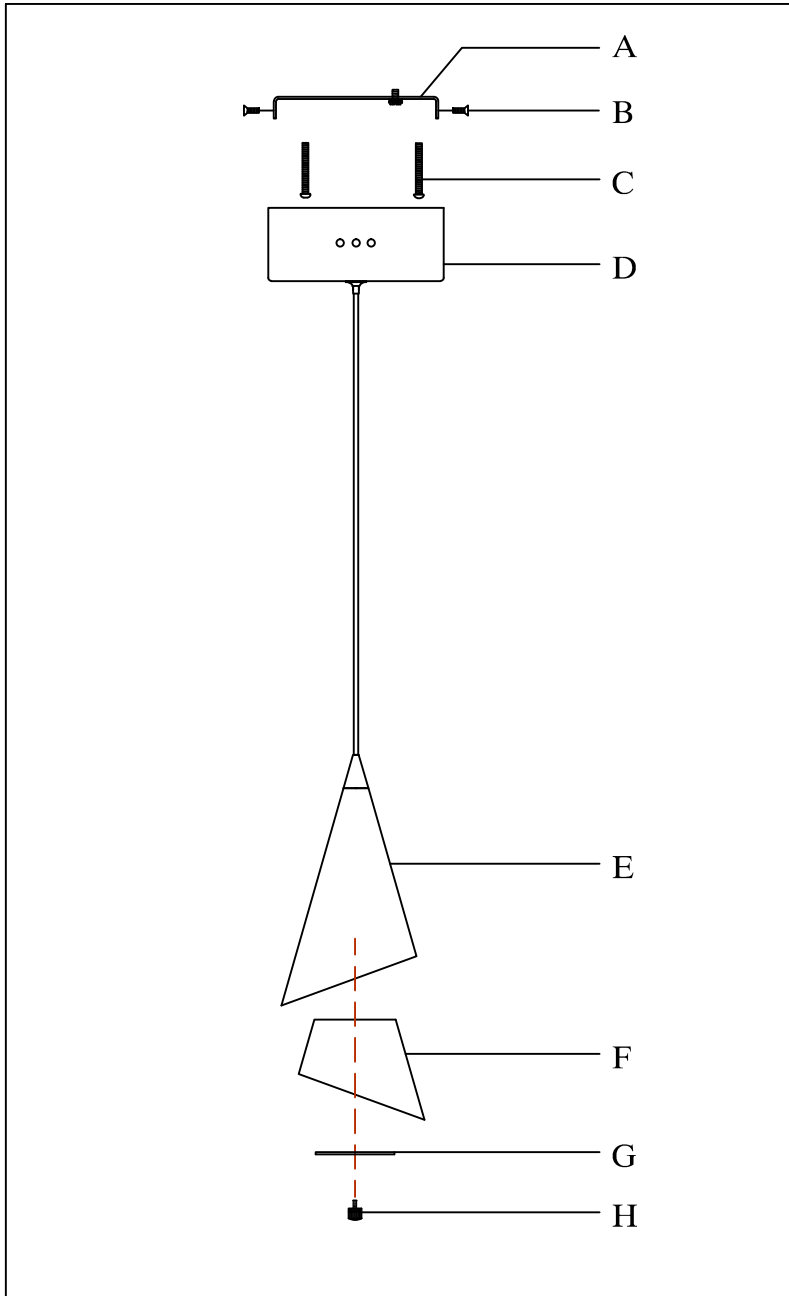

4.)


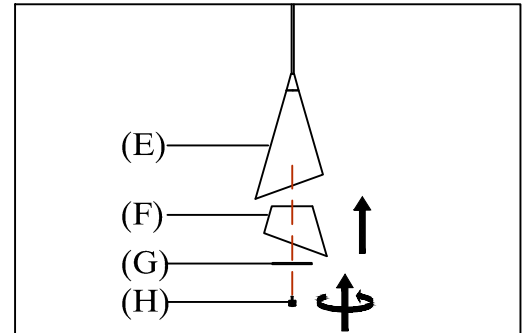


Step4 :Fit lampshade(F) into  
lampshade(E).Secure with acrylic(G)  
and tighten center locking nut(H).

**Cleaning & Care:**  
Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.

Pendant Wires

Driver Wires

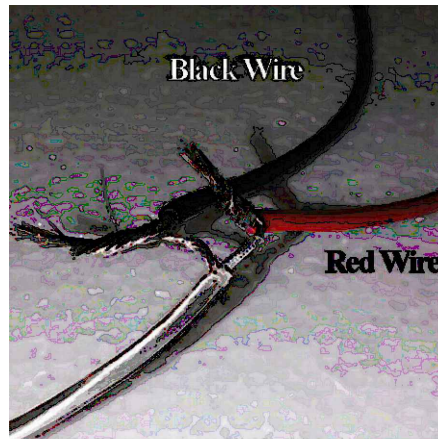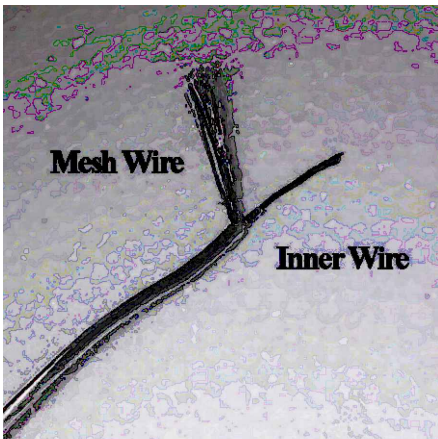

Pendant	Driver
InnerWire (+)	Driver Red (+)
Outer Mesh (-)	Driver Black(-)

Step 5. If wires are cut in the process of adjusting the height, please note the pendants consist of an outer mesh wire (Negative) and inner (Positive) wire that must be separated before re-joining with the driver output wires. Pendants are wired in series to the driver, as shown below.

