


Contemporary Lighting

PRODUCT NAME: Pod

ITEM NUMBER: E21457-93BKGLD

Please consult your electrician for hanging fixture and wiring.

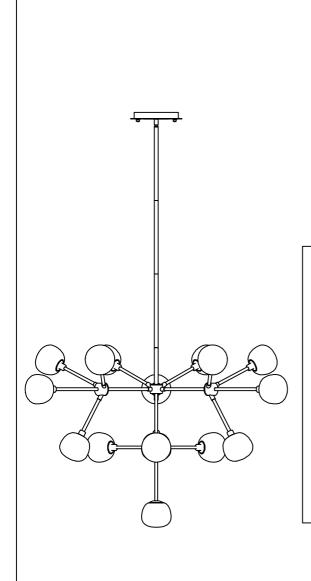

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:


Lutron MACL-153M Lutron DVL-153P Lutron SCL-153P Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.


Bulb(included): 24 x 4W LED G9 bulbs

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

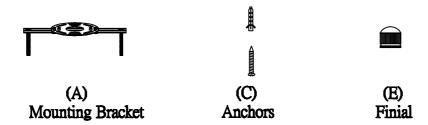

Locate all hardware & components before discarding packaging

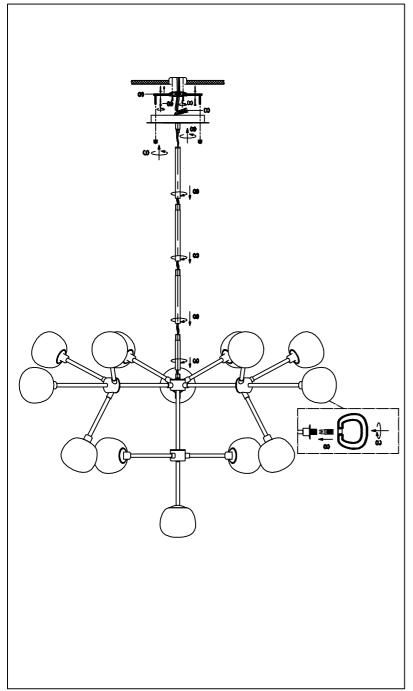

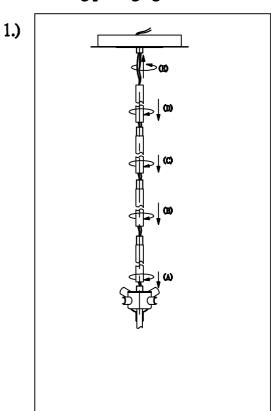


Step.1:: Run wire through stems and combine stem lengths to meet desired mounting height.


Cleaning & Care:


Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

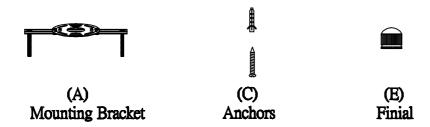

Locate all hardware & components before discarding packaging

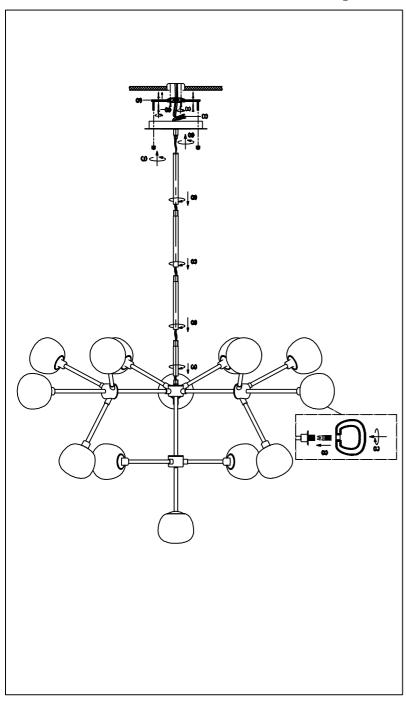




Step.2: Remove mounting bracket from fixture and install to electrical box using screws (H). Mark where screws at ends of bracket (F) meet the ceiling. Remove mounting bracket (F) from ceiling. Drill holes using 3/16"± drill bit where marked. Install mounting bracket (F) to outlet box by attaching anchors (G) to secure bracket at ends.

3.)

Step.3: Wire fixture to wires (I) in outlet box. Copper wire is for Ground.

4.)

Step.4: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install fixture to bracket and tighten screws (J) at the ends of the canopy to secure.



Step.5: Install G9 light bulb provided (K) and screw on glass shade (L).

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.