




# Installation Instructions

## Model E22353-PC

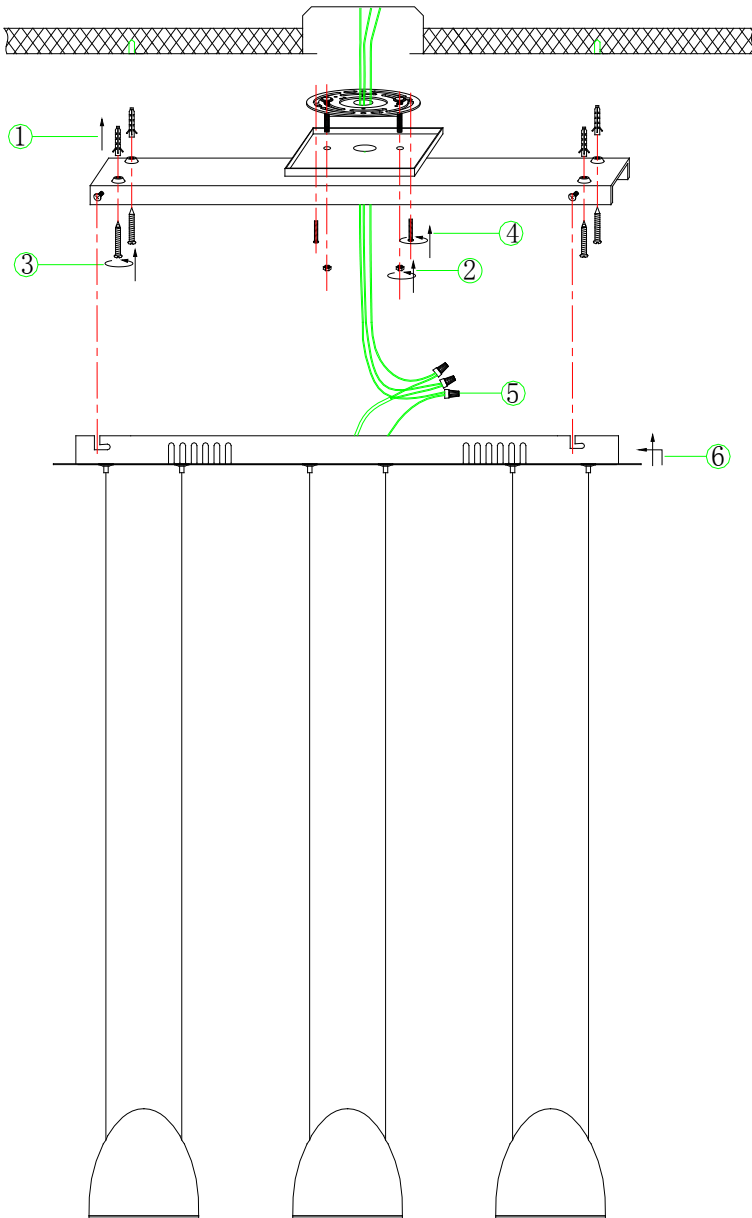

1. It is recommended the fixture be installed by a qualified licensed electrician.
2. Turn breaker off for circuit on outlet where fixture is to be installed.
3. Install round mounting bracket to outlet box.
4. Determine mounting height of fixture and cut wire leaving an additional 12" of extra wire for wiring.
5. Thread wire through bottom of decorative dome canopy and let slide down wire to top of pendant.
6. Insert wire into bottom of mounting cap and tie knot in cord on inside cap for strain relief. Position mounting cap to ceiling to check mounting height. Adjust if necessary.
7. Wire fixture to outlet. Connect white to neutral and green to ground.
8. Install mounting cap to mounting bracket and tighten cap nuts.
9. Move decorative canopy up wire to meet ceiling and tighten screw on bottom to secure.

The fixture is designed to with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

- Lutron MACL-153M
- Lutron DVL-153P
- Lutron SCL-153P
- Leviton IPL06-10Z
- Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

**WARNING:** Wires need to be connected to driver found in canopy and should not connect directly to power source or a short might occur.