
E12

Contemporary Lighting™

Installation Instructions Model E22558-PC

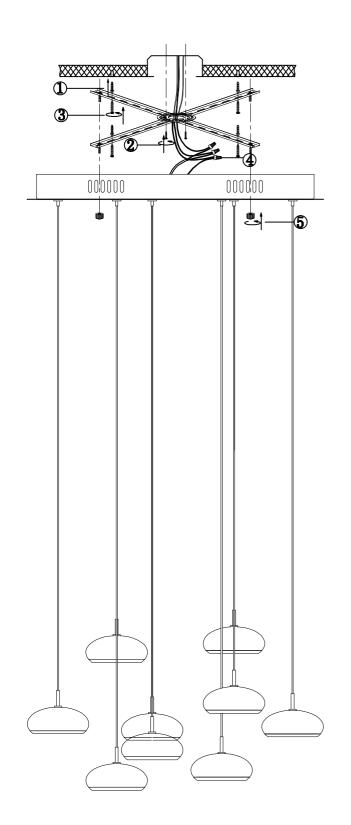

- 1. It is recommended the fixture be installed by a qualified licensed electrician.
- 2. Turn breaker off for circuit on outlet where fixture is to be installed.
- 3. Remove X bracket from fixture and install to electrical box
- 4. Mark 4 holes on outer slots of bracket for hollow wall anchors
- 5. Remove X bracket from outlet
- 6. Drill 4 x 1/8" holes and insert hallow wall anchors
- 7. Reinstall X bracket to outlet and secure bracket to ceiling using 4 screws included into hallow wall anchors.
- 8. Determine mounting height of fixture and adjust wires accordingly.
- 9. Wire fixture to outlet. Connect white to neutral and green to ground.
- 10. Install fixture onto X mounting bracket and tighten screws to secure.

Warning! This fixture is supplied with permanently installed LED light engine.These fixtures are dimmable using standard triac dimmer. For best operation we recommend using Lutrc CL dimmers.