




Contemporary
Lighting™

PRODUCT NAME: Trapezoid LED Pendant

ITEM NUMBER: E22678

Please consult your electrician for hanging fixture and wiring.

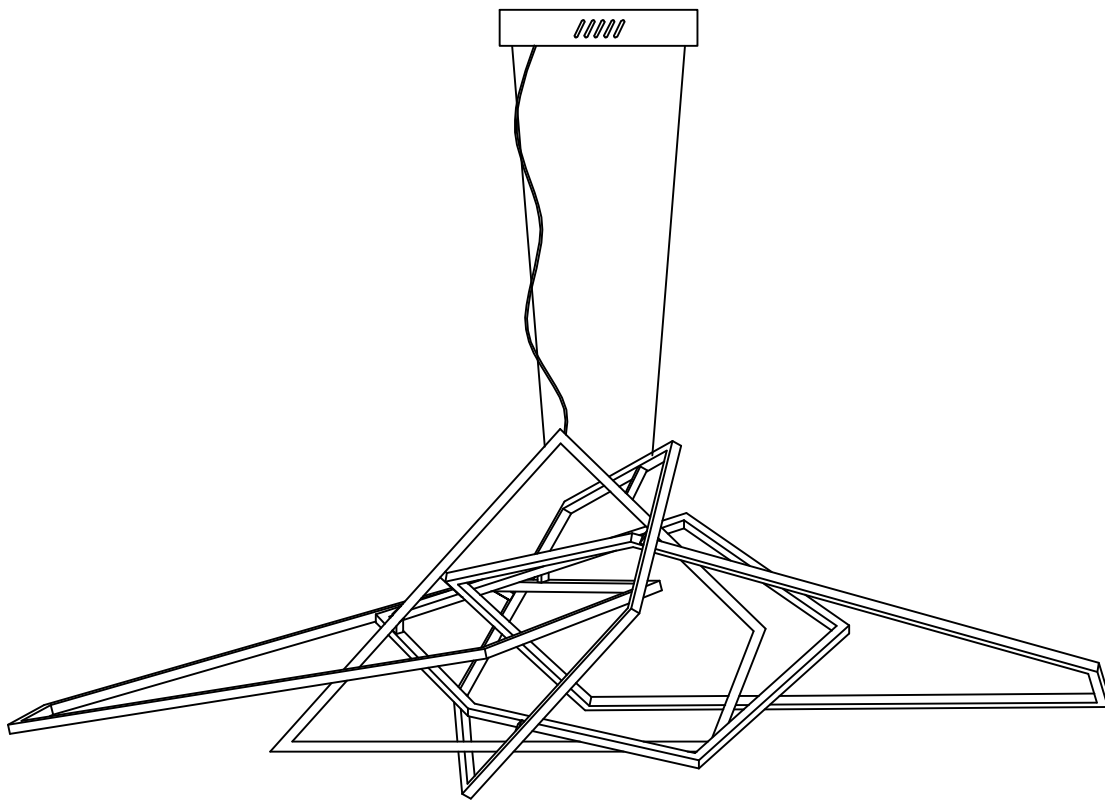

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

The fixture is designed to dim with a standard Triac forward phase dimmer.

Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P

Leviton IPL06-10Z

Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

LED 68W

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



Screws*6PCS




Bracket




Mounting Screws *4PCS

Locate all hardware & components before discarding packaging

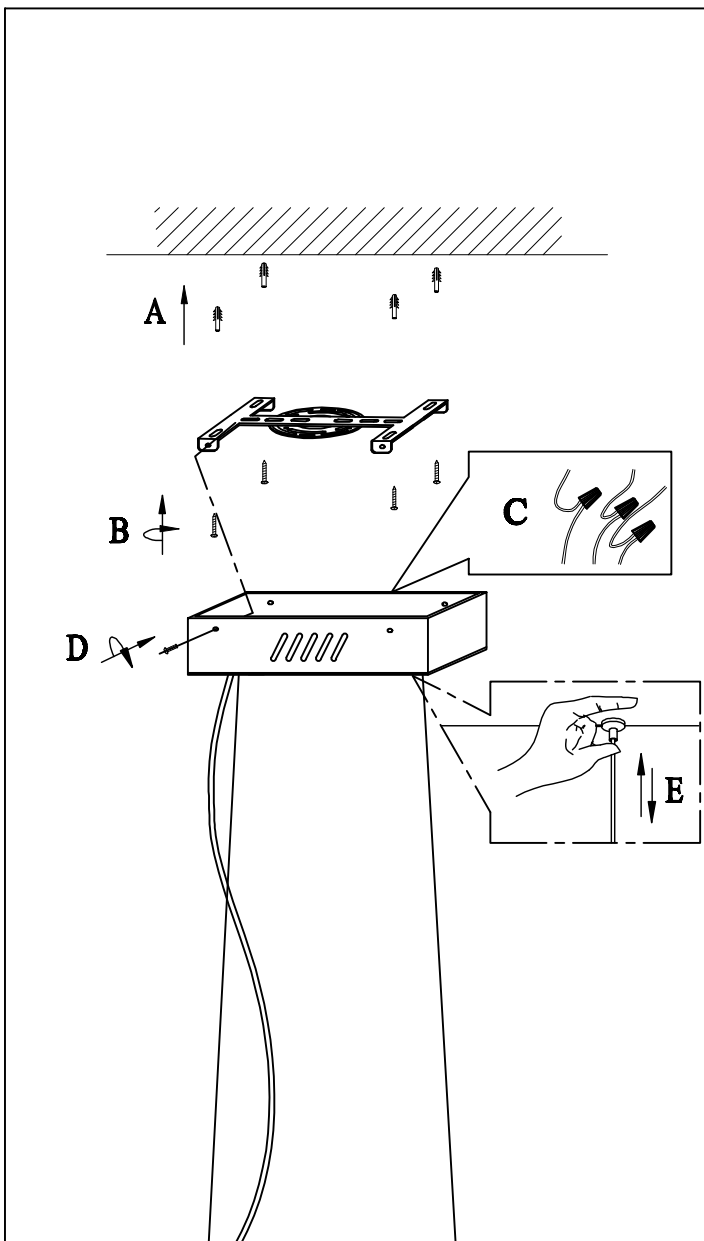


1.)

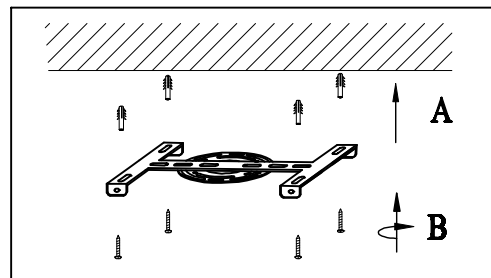

Step 1: Remove mounting bracket from fixture and install to electrical box.

2.)

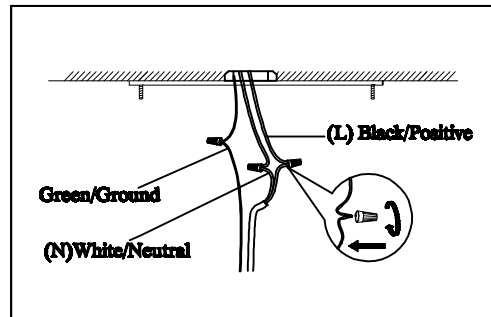

Step 2: Then wire fixture to wires in outlet box. Copper wire is for Ground. install lamp body to mounting bracket using two screws on side.

Remark:

**Black wire with letter
= Positive**

**Transparent wire without letter
= Negative**

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.