


PRODUCT NAME : Jibe LED Pendant

ITEM NUMBER: E23204-MW

Please consult your electrician for hanging fixture and wiring.

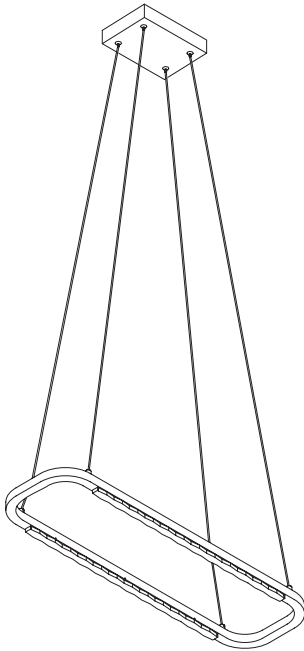

WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW

Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

26W LED

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




(A)

Bracket



(B)


Canopy

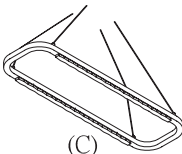


(C)

Body

Locate all hardware & components before discarding packaging




1.)

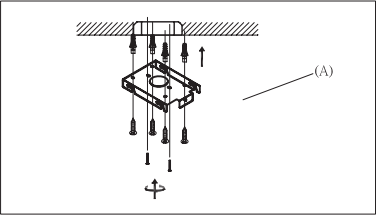


Step.1: Remove Bracket (A) from fixture and install to electrical box.

2.)

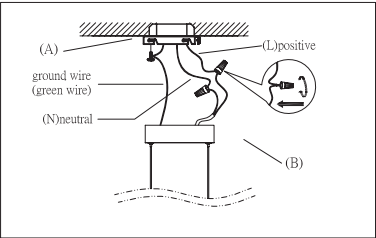

Step.2: Wire fixture to wires in outlet box.  
Install Green wire to Ground Screw.

3.)

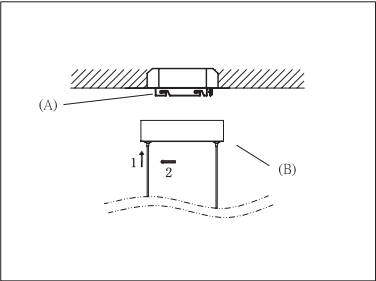

Step 3: Adjust wire length to desired hanging height.  
Will be Canopy (B) corresponding Bracket (A) card slot to right tight