




Contemporary Lighting

PRODUCT NAME: LARMES
ITEM NUMBER: E20115-18

Please consult your electrician for hanging fixture and wiring.

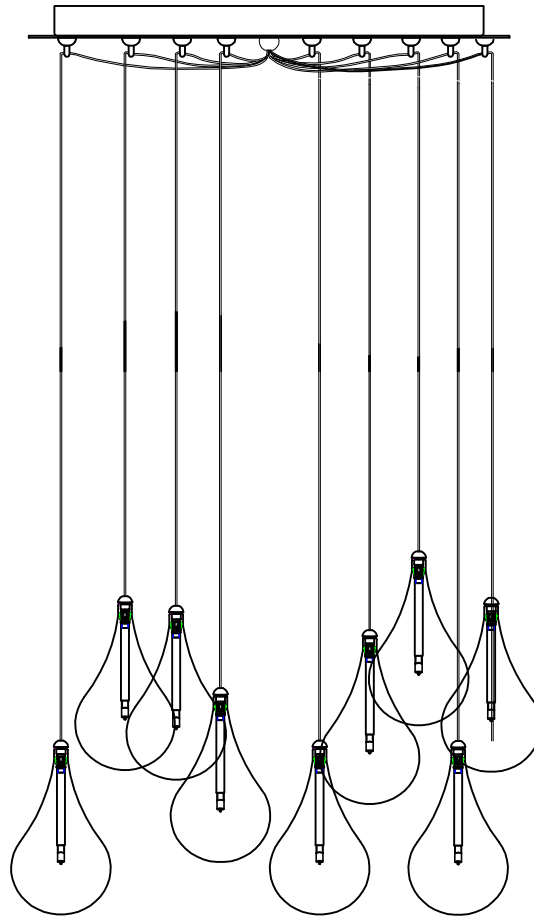


WARNING: Wires need to be connected to transformer found in canopy and should not be connected directly to power source or a short may occur



Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulbs (Included): 9 x 20 Watt G4


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

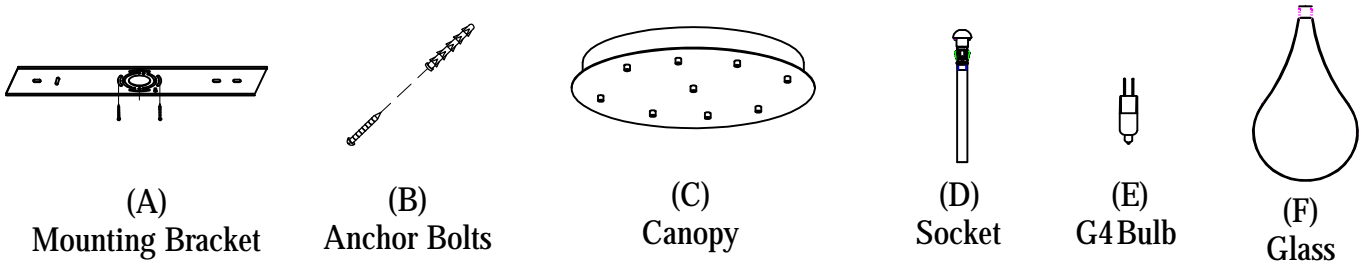


Locate all hardware & components before discarding packaging

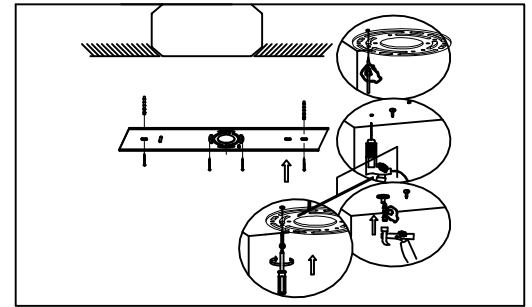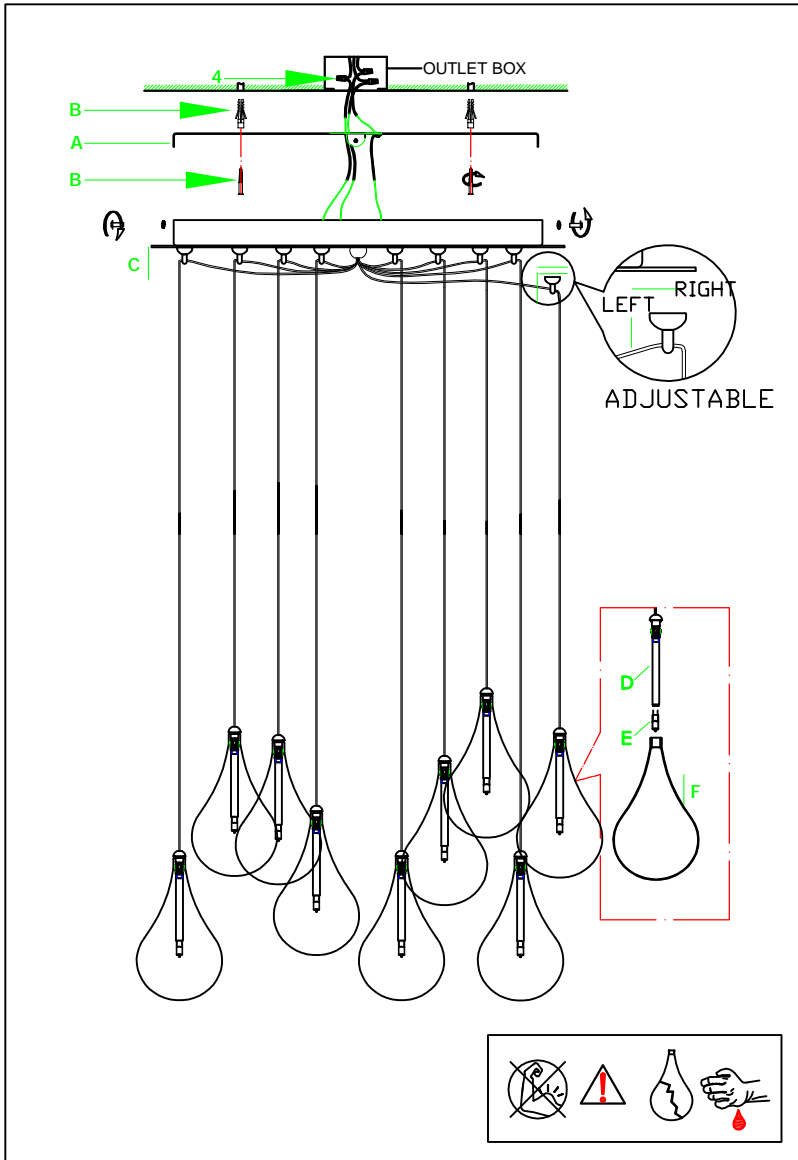


Step.1: Remove mounting bracket (A) and install to electrical box. Mark where anchors meet ceiling, remove mounting bracket from ceiling, and then drill holes using 3/16" drill bit where marked (B). Install mounting bracket and attach anchors to secure bracket at ends.

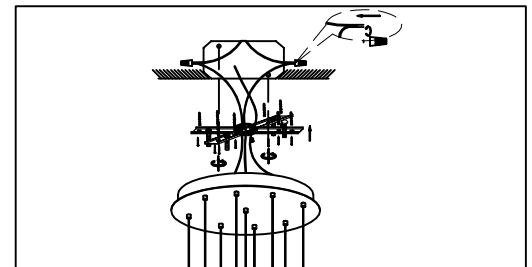

Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

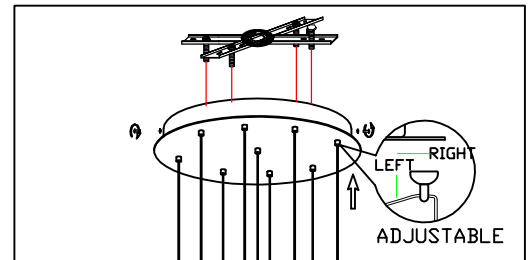

Step.3: Adjust wire to desired mounting height. Secure canopy to mounting bracket using screws along the edge of the canopy.

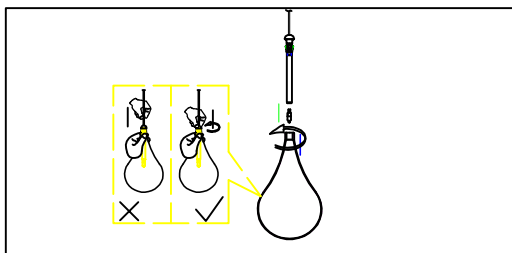

Step.4: Install G4 bulb (E) provided. Gently turn glass (F) onto socket (D) to secure.

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.