




PRODUCT NAME: Converge LED Wall Sconce

ITEM NUMBER: E20708

Please consult your electrician for hanging fixture and wiring.

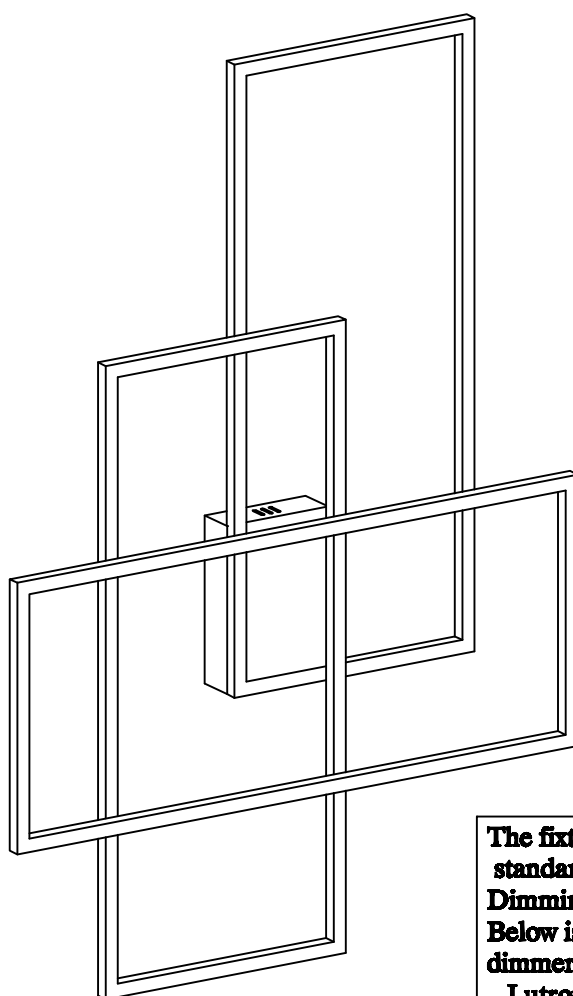

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer. Below is a list of recommended dimmers:

Lutron MACL-153M
Lutron DVL-153P
Lutron SCL-153P
Leviton IPL06-10Z
Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

LED 55W

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



Screws*2PCS




Bracket



Mounting Screws*2PCS


Locate all hardware & components before discarding packaging

1.)

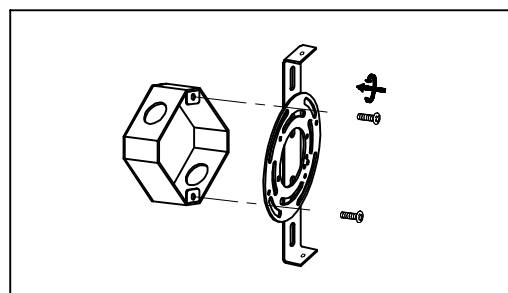

Step 1: Remove mounting bracket from fixture and install to electrical box.

2.)

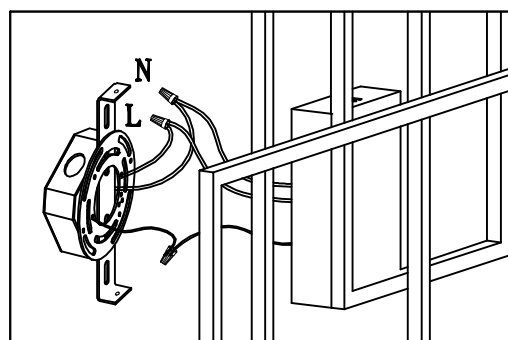

Step 2: Then wire fixture to wires in outlet box. Copper wire is for Ground. install lamp body to mounting bracket using two screws on side.

Cleaning & Care:

Clean with soft cloth and a mild detergent.

Do not use abrasive cleaner.