


## Contemporary Lighting

PRODUCT NAME: Squared ITEM NUMBER: E24550-PC

Please consult your electrician for hanging fixture and wiring.

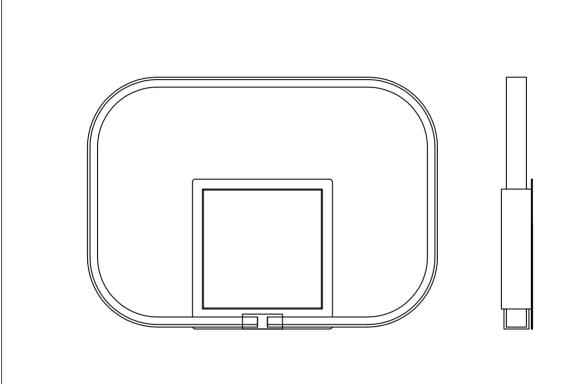

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.


Warning: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

## IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation




Locate all hardware & components before discarding packaging

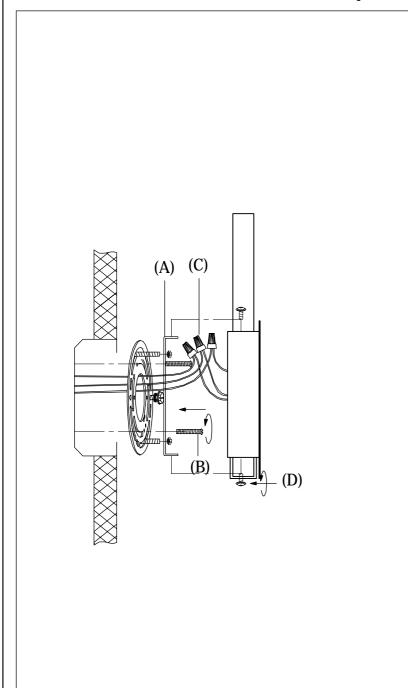


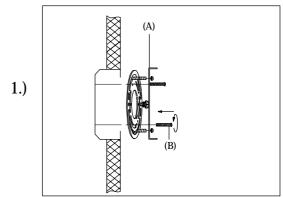

Step.1: Install mounting bracket (A) to electrical box using screws(B).



Step.2: Wire fixture to wires in outlet box.
Green/Copper wire is for Ground.
(C)



Step.3: Install face to wall sconce using two screws at sides of fixture.(D)

Cleaning & Care: Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.