


PRODUCT NAME: Cosmo **ITEM NUMBER: E30616**

Please consult your electrician for hanging fixture and wiring.

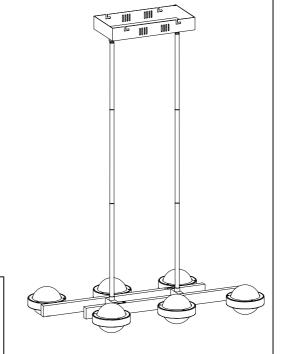

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M **Lutron DVL-153P** Lutron SCL-153P Leviton IPL06-10Z Leviton 6674-POW

Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.


WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur


LED 6 x 4.5W Bulbs

IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation




Locate all hardware & components before discarding packaging

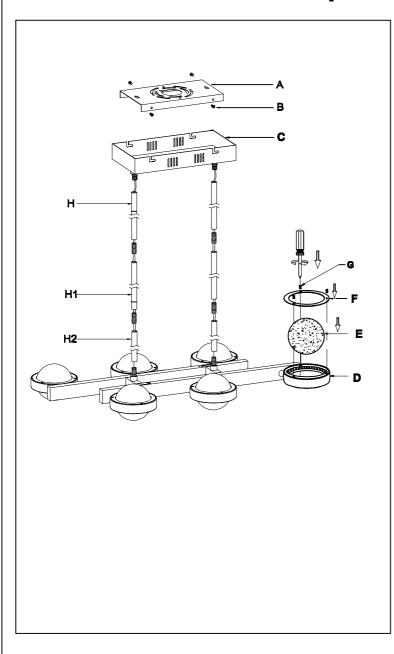



Step.1: Remove mounting bracket (A) from back plate (C) and install to electrical box.

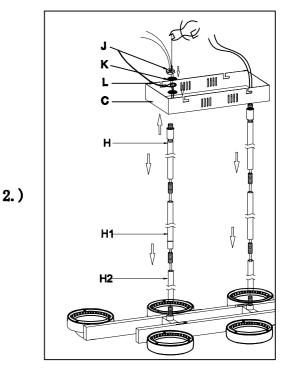

Step.2: Run wire through stems and combine stem lengths to meet desired mounting height.

Connect canopy to stem using washer (L) lock washer (K) and hexnut (J) to secure.


Cleaning & Care:


Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation




Locate all hardware & components before discarding packaging

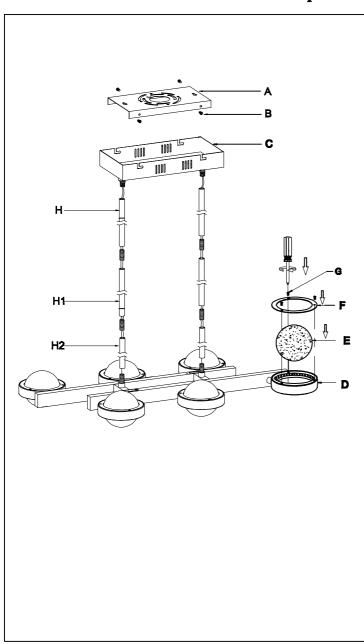

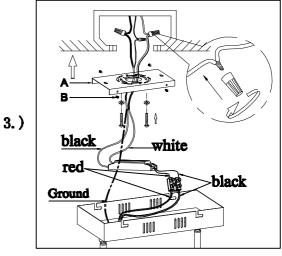

Step.3: Wire the fixture using the teminal block. The low voltage wires from the driver are already connected. Connect the black wire to the fixture's black wire and red wire to the fixture's red wire. Install the fixture to the mounting bracket using screws (B) provided.

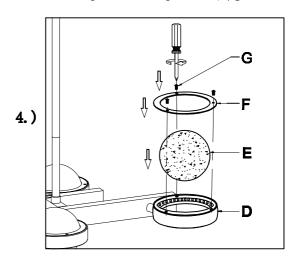

Step.4: Place bubble glass sphere (F) into cup and secure using ring (G).

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.